

INSTRUCTION SHEET

192/193-920/921/965/966

Entertainment Unit

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Caution: (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.

- (2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.
- (3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and or screwdrivers to prevent injury and scratching or damaging flooring.
- (4) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the above mentioned components is attached to the furniture properly and kept tightened at all times.

PARTS LIST:

#	Description	Qty.	#	Description	Qty.
Α	Entertainment Hutch	1pc	В	Entertainment console	1pc
С	Right Bookcase	1pc	D	Left Bookcase	1pc
Е	Side panels	2pcs	F	Middle back panel	1pc
G	Top frame unit	1pc	Н	Top sliding doors	2pcs
ı	Hardware pack(1)	1bag	J	Hardware pack(2)	1bag
K	Hardware pack(3)	1bag			

Note: The tipping restraint kits are located on the back of right bookcase (C) and left bookcase (D). Always use tipping restraint kits for safety.

Assembly Procedure: (Please follow the sketches below.)


- **Step 1:** Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware. Make sure the quantity of each is correct.
- Step 2: Disregard this step when the hutch (A) is not in use. Attach the side panels (E) to the middle back panel (F) with bolts and allen wrench(③) in hardware pack(1) then attach the top frame unit (G) as shown, attach the sliding doors (H) to the top frame unit (G). Now the hutch (A) is assembled.
- Step 3: Disregard this step when right bookcase (C) and left bookcase (D) are in use. Attach the upper strips to entertainment console (B) by hand. Attach the bottom strips to console (B) with the bolts (1), lock washers (3) and flat washers (2) by the wrench (4) in hardware pack (2). Disregard the following steps when the bookcases (C&D) and hutch (A) are not in use.
- **Step 4:** Put the foam pads on the corners of the console top as shown. Put the entertainment hutch (A) on the entertainment console (B). Secure them with mending plates (①) and screws (②) by a phillip head screwdriver (Not provided). Disregard the following steps when the bookcases (C&D) are not in use.


Step 5: Position left and right bookcases (D&C) next to the entertainment console and hutch as shown.

Note: To level the entertainment console (B) and bookcases (C&D), follow below steps.

Open the door, take off the plastic covers and level the cases by turning the leveler at its bottom as necessary.

Assembly is now complete.

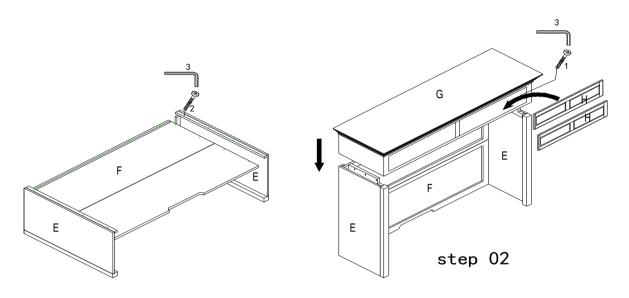

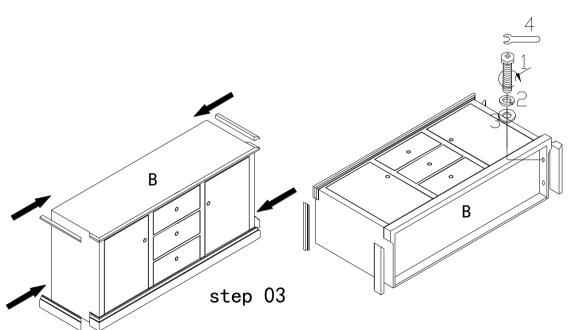


Hardware Pack(1)

1	Bolt	1/4"*1-1/4"	6PCS
2	Long Bolt	1/4″*1-1/2″	13PCS
3	Allen Wrench	70*30*4MM	1PC

Hardware Pack(2)

1	Phillips Head Bolt	***1-3/8"	4PCS
2	Falt Washer		4PCS
3	Lock Washer	1/4″*19MM	4PCS
4	Wrench	\$7*10mm	1PCS

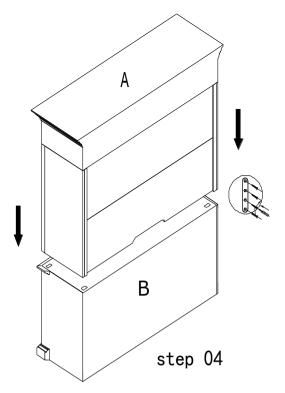

Hardware Pack(3)

1	Mending plate	(0000)	2PCS
2	Srews	#6*3/4 <i>"</i>	8PCS
3	Foam pad	\Diamond	4PCS

