

**INSTRUCTION SHEET**

356965

**ENTERTAINMENT DECK**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

**Caution:** (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.

(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.

(3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and or screwdrivers to prevent injury and scratching or damaging flooring.

(4) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the above mentioned components is attached to the furniture properly and kept tightened at all times.

**PARTS LIST:**

#	Description	Qty.	#	Description	Qty.
<b>A</b>	Middle & Bottom Mesh	1 pc	<b>E</b>	Wood Apron	1set
<b>B</b>	Middle & Top Mesh	1 pc	<b>F</b>	Metal Plate	3 pcs
<b>C</b>	Side Cabinet	2 pcs	<b>G</b>	Hardware Pack	1 bag
<b>D</b>	Top Cabinet	1 pc			

**Assembly Procedure:** (Please follow the sketches below.)

**Step 1:** Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware. Make sure the quantity of each is correct.

**Step 2:** Fix the middle & bottom mesh ( A ) to the middle & top mesh ( B ) with the flat head bolt ( 1 ), please don't tighten the bolts for this step.

**Step 3:** Fix the assembled middle mesh ( A & B ) to the side cabinet ( C ) with the flat head bolt ( 1 ), please don't tighten the bolts for this step.

**Step 4:** Place the wood apron (E) upside down in a smooth, clean, and soft surface. and then tighten the wood apron (E) to the top cabinet ( D ) with the flat head bolt ( 1 ). please tighten the bolts for this step.

**Step 5:** Attach the fixed top cabinet ( D ) to the middle & top mesh ( B ) and the side cabinet ( C ) with the flat head bolt ( 1 ).

please tighten all the bolts for the above step.

**Step 6:** Put the unit on the top of the console, fix the metal plate ( F ) to the middle & bottom mesh ( 1 ) and side cabinet ( C ) with the flat head bolt ( 1 ), and then fix the metal plate ( F ) to the back of the console with the wood screw ( 2 ). please tighten the bolts for this step.

**Assembly is now complete.**

INSTRUCTION SHEET


356965

ENTERTAINMENT DECK


Hardware Pack (G)

1	Flat Head Bolt		1/4"*5/8"	31PCS
2	Wood Screw		4*19	3PCS
3	Allen Wrench		1/4	1PC


Step2

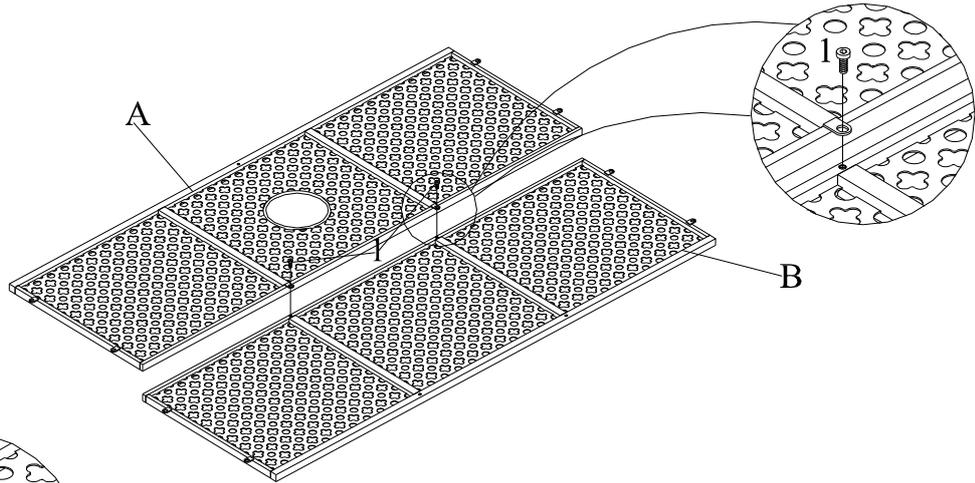

Step3

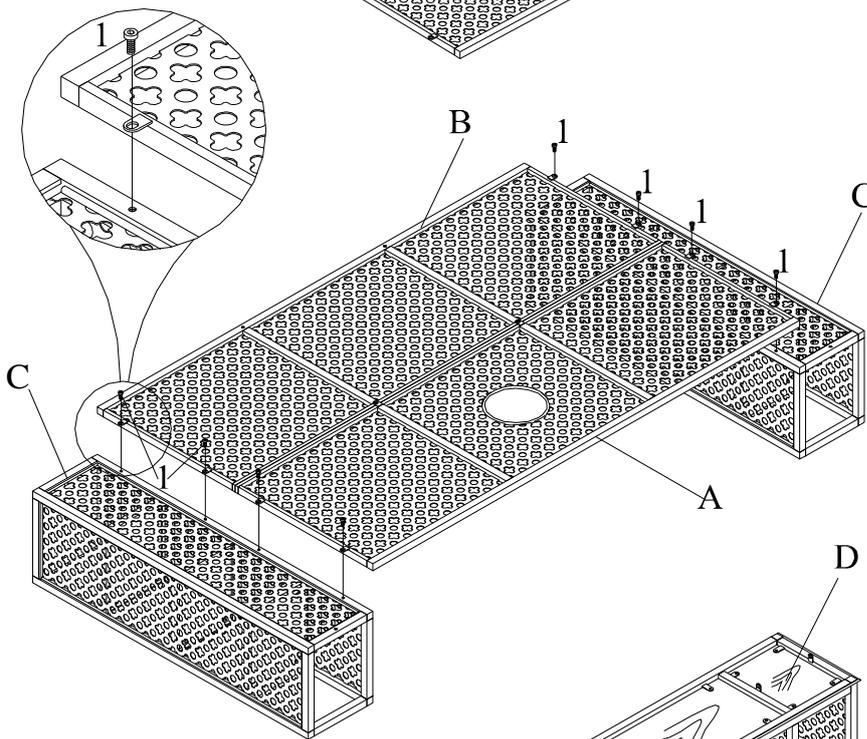

Step4

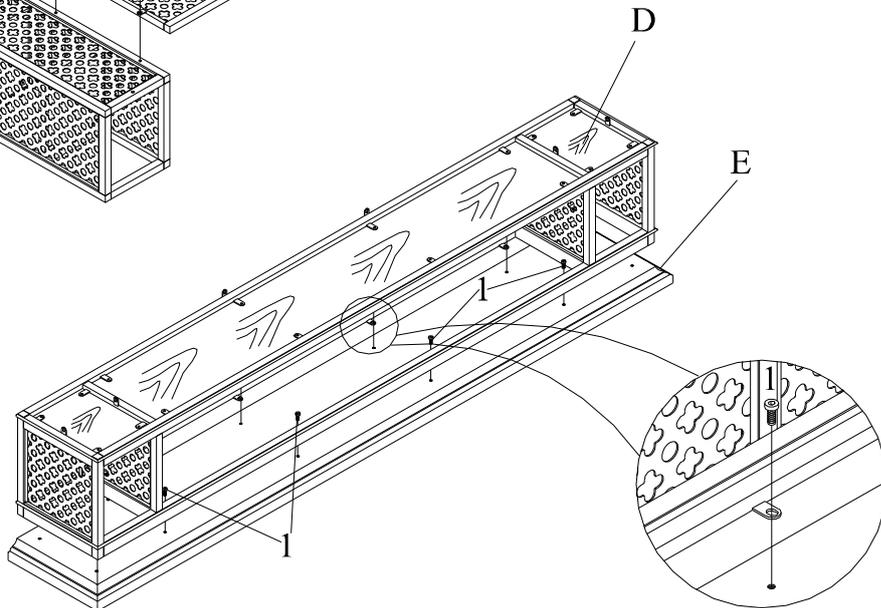


INSTRUCTION SHEET

356965

ENTERTAINMENT DECK

Step 5

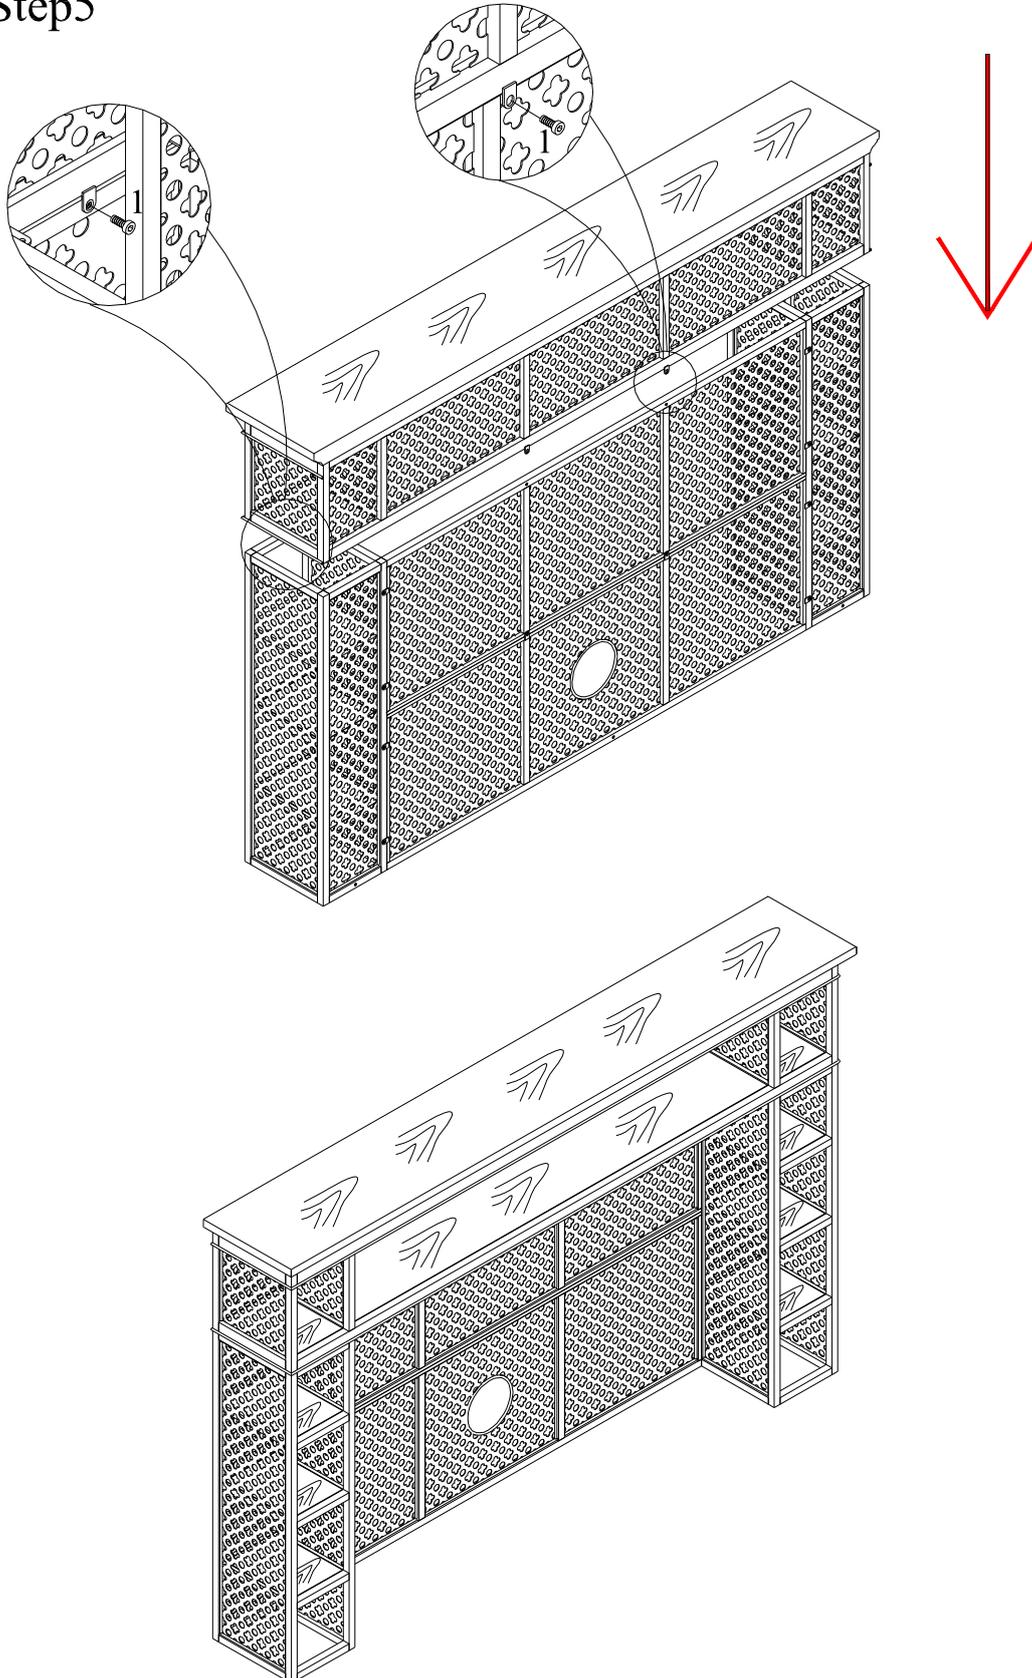

INSTRUCTION SHEET

356965

ENTERTAINMENT DECK

Step 6

