

INSTRUCTION SHEET

788-966

Entertainment Console

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Caution: (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.

(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.

(3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and or screwdrivers to prevent injury and scratching or damaging flooring.

(4) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the above mentioned components is attached to the furniture properly and kept tightened at all times.

PARTS LIST:

#	Description	Qty.	#	Description	Qty.
A	Console Top	1pc	B	Side Leg	4pcs
C	Center Leg	1pc	D	Glass Door	4pcs
	Hardware pack	1bag			

Assembly Procedure: (Please follow the sketches below.)


 
Step 1: Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware. Make sure the quantity of each is correct.


Step 2: put the dresser top (A) upright down on a soft and smooth surface to avoid damage or being scratched. Then attach the legs (B & C) to the table top (A) with phillip head bolts (1), spring washers (2) and flat washers (3) using wrench (4). Tighten all the bolts and turn it upright.

Step 3: Put the pad (6) and bracket (5) onto the top and bottom of the glass door (D) as below shown.

Note : It is best for two or more persons are involved.

Assembly is now complete.

HARDWARE LIST(E)			Q'TY
1	PHILLIP WRENCH	 5/16"1"	10PCS
2	SPRING WASHER	 5/16**13*2mm	10PCS
3	FLAT WASHER	 5/16**19*2mm	10PCS
4	WRENCH	 87*19.2.5mmT	1PC
5	"U" BRACKET	 40*24*16mm	8PCS
6	PAD	 43*47*2mm	8PCS

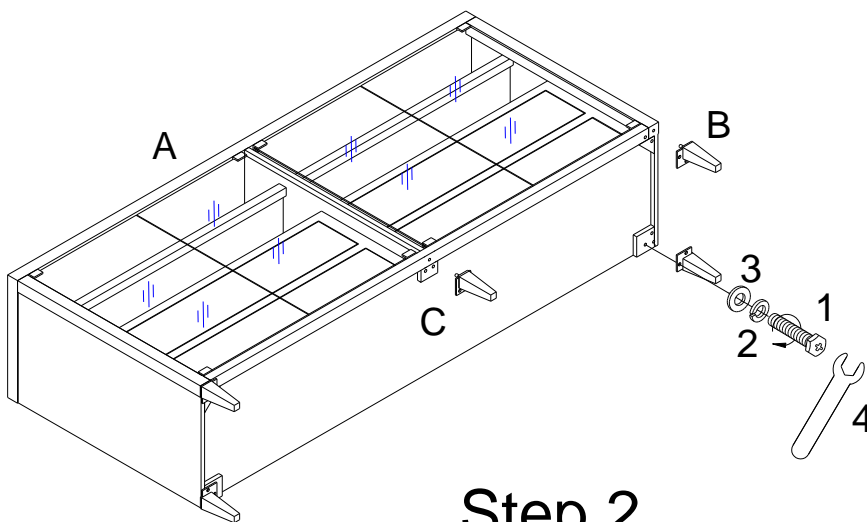

Step 2

INSTRUCTION SHEET

788-966

Entertainment Console

