

INSTRUCTION SHEET**596-310/31R/320/33R****Upholstered Metal Bed 5/0 6/6 6/0**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Caution: (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.

(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.

(3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and or screwdrivers to prevent injury and scratching or damaging flooring.

(4) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the above mentioned components is attached to the furniture properly and kept tightened at all times.

PARTS LIST:

#	Description	Qty.	#	Description	Qty.
A	Headboard	1pc	B	Footboard	1pc
C	Side Rail	2pcs	D	Slat	4pcs
E	Slat support leg	4pcs	F	Hardware pack	1bag

Assembly Procedure: (Please follow the sketches below.)

Step 1: Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware. Make sure the quantity of each is correct.

Step 2: Lock the bed side rails by allen head bolts (1), spring washers (2) and flat washers (3) into the posts of the headboard and the footboard as explained and shown in the sketch on the assembly instruction sheet provided.








Step 3: Attach the slats (D) to the side rails (C) with allen head bolts (5) using allen wrench (6) as below shown. Then lock the slat support legs (E) by allen head bolts (7) into the slats (D).


Assembly is now complete.

INSTRUCTION SHEET


596-310/31R/320/33R

Upholstered Metal Bed 5/0 6/6 6/0

HARDWARE LIST(F)			QTY
1	ALLEN HEAD BOLT		8 PCS
2	SPRING WASHER		8 PCS
3	FLAT WASHER		8 PCS
4	ALLEN WRENCH		1PC
5	ALLEN HEAD BOLT		8 PCS
6	ALLEN WRENCH		1 PC
7	ALLEN HEAD BOLT		4 PCS

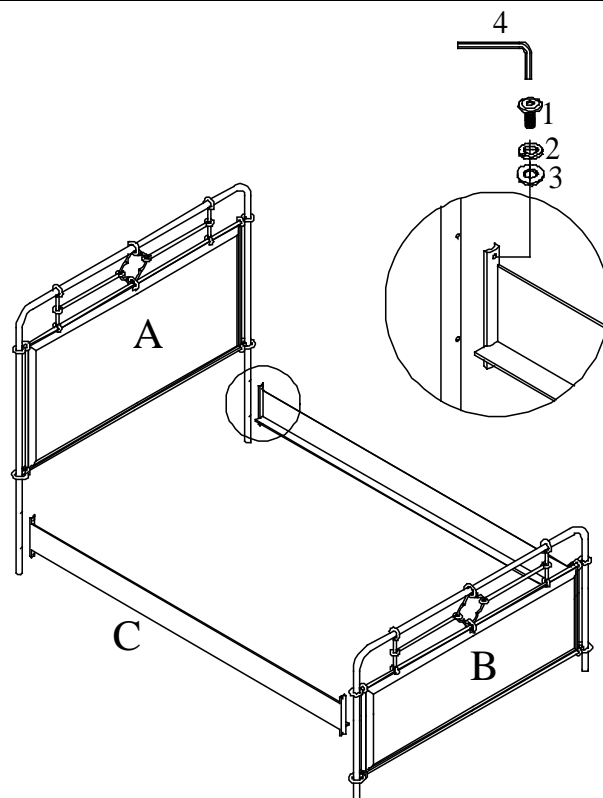

STEP 2

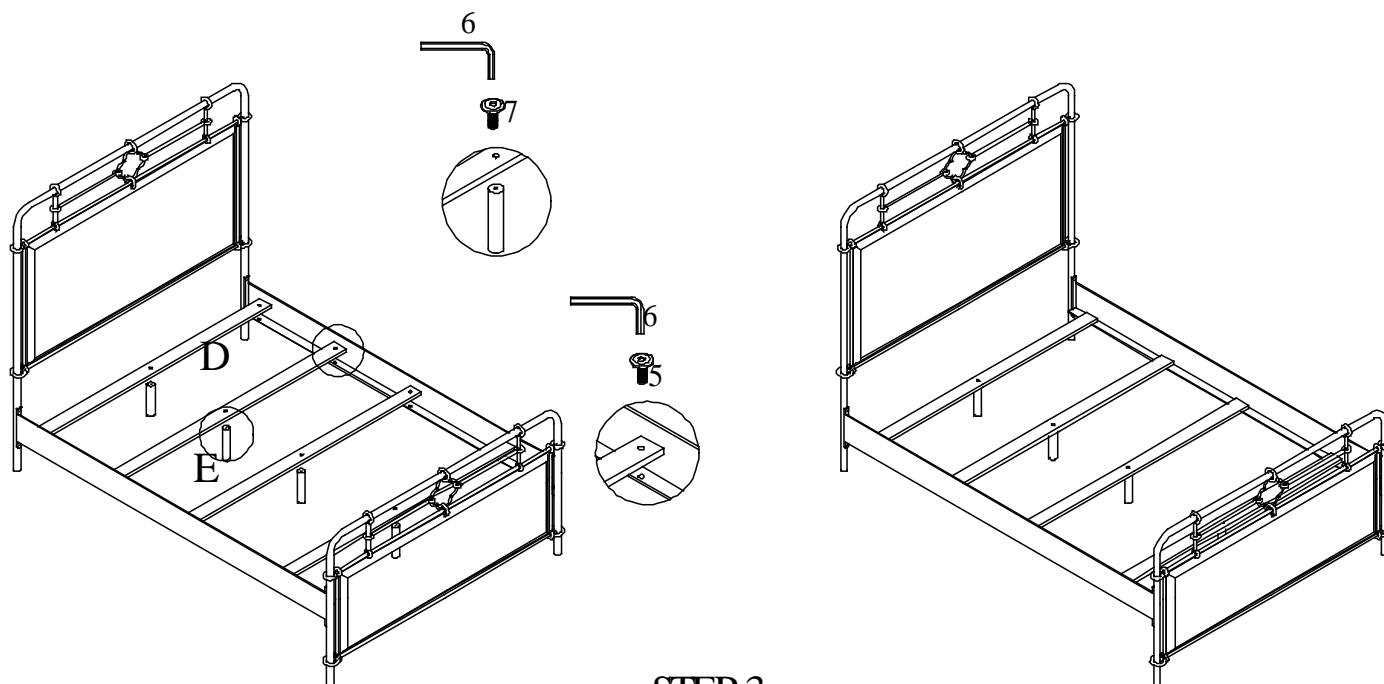

STEP 3