

## INSTRUCTION SHEET

### ASSEMBLY INSTRUCTIONS U033A290/ U033A29FR/U033A29C/U033A29S Boca Grande Key King 66

Thank you for purchasing this quality product. Be sure check all packing material carefully for small parts that may have come loose inside the carton during shipping.
















**Caution:** (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.

(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.












(3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and or screwdrivers to prevent injury and scratching or damaging flooring.

(4) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the above mentioned components is attached to the furniture properly and kept tightened at all times.

### Parts List:

Description	Sketch	QTY	Description	Sketch	QTY
Headboard (A)		1 pc	Slat (H)		5 pcs
Left Headboard post (B)		1 pc	Long canopy (I)		2 pcs
Right Headboard post (C)		1 pc	Short canopy (J)		2 pcs
Footboard panel (D)		1 pc	Side Rail (K)		2 pcs
Left Footboard post (E)		1 pc	Hole cover (L)		4 pcs
Right Footboard post (F)		1 pc	Center Rail (M)		1 pc
Support Leg (G)		10 pcs	Center rail support (N)		1 pc
			Slat roll (O)		1 set

### Hardware List:

1	Threaded bolt	5/16"x3"		14 pcs	7	Flat washer	5/16"x19mm		6 pcs
2	Curve washer	5/16"		14 pcs	8	Wood dowel	Ø10x40mm		4 pcs
3	Spring washer	5/16"		20 pcs	9	Allen bolt	1/4"x1-3/4"		4 pcs
4	Nut	5/16"		14 pcs	10	Allen key	4mm		1 pc
5	Wrench	12mm		1 pc	11	Screw	#8x1-1/4"		12 pcs
6	Hex Head bolt	5/16"x2"		6 pcs					

## INSTRUCTION SHEET


ASSEMBLY INSTRUCTIONS U033A290/ U033A29FR/U033A29C/U033A29S Boca Grande Key King 66

### OPTION 1: MATTRESS ONLY

Assembly Procedure: (Please follow the sketches below.)

- Step 1:** Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware. Make sure the quantity of each is correct.
- Step 2:** Insert the dowel (8) into the Left HB post (B) and Right HB post (C) as shown. Assemble the left headboard post (B) and right headboard post (C) to headboard panel (A) using Hex Head bolt (6), spring washer (3), flat washer (7). Tighten all bolts securely with Wrench (5), but do not over tighten the bolts.
- Step 3:** Insert the dowel (8) into the Left FB post (E) and Right FB post (F) as shown. Assemble the left footboard post (E) and right footboard post (F) to footboard panel (D) using Threaded bolt (1), curve washer (2), spring washer (3), nut (4). Tighten all nuts securely with Wrench (5), but do not over tighten.
- Step 4:** Assemble siderail (K) to headboard posts (B,C) and footboard post (E,F) using Threaded bolt (1), curve washer (2), spring washer (3), nut (4). Tighten all nuts securely with Wrench (5), but do not over tighten.
- Step 5:** Assemble each support leg (G) into each slat (H).
- Step 6:** Attach each slat (H) on the side rails (K) using screws (11) as shown. Adjust the height of each support leg (G) by turning adjustable levelers located on the bottom of each support leg (G), clockwise to lower and counterclockwise to raise.
- Step 7:** Attach the long canopy (I) and short canopy (J) to the left headboard post (B,C) and left footboard post (E,F) using allen bolt (9). Tighten all bolts securely with allen key (10), but do not over tighten.
- Step 8:** Insert the hole covers (L) inplace as shown.





Assembly is now complete.

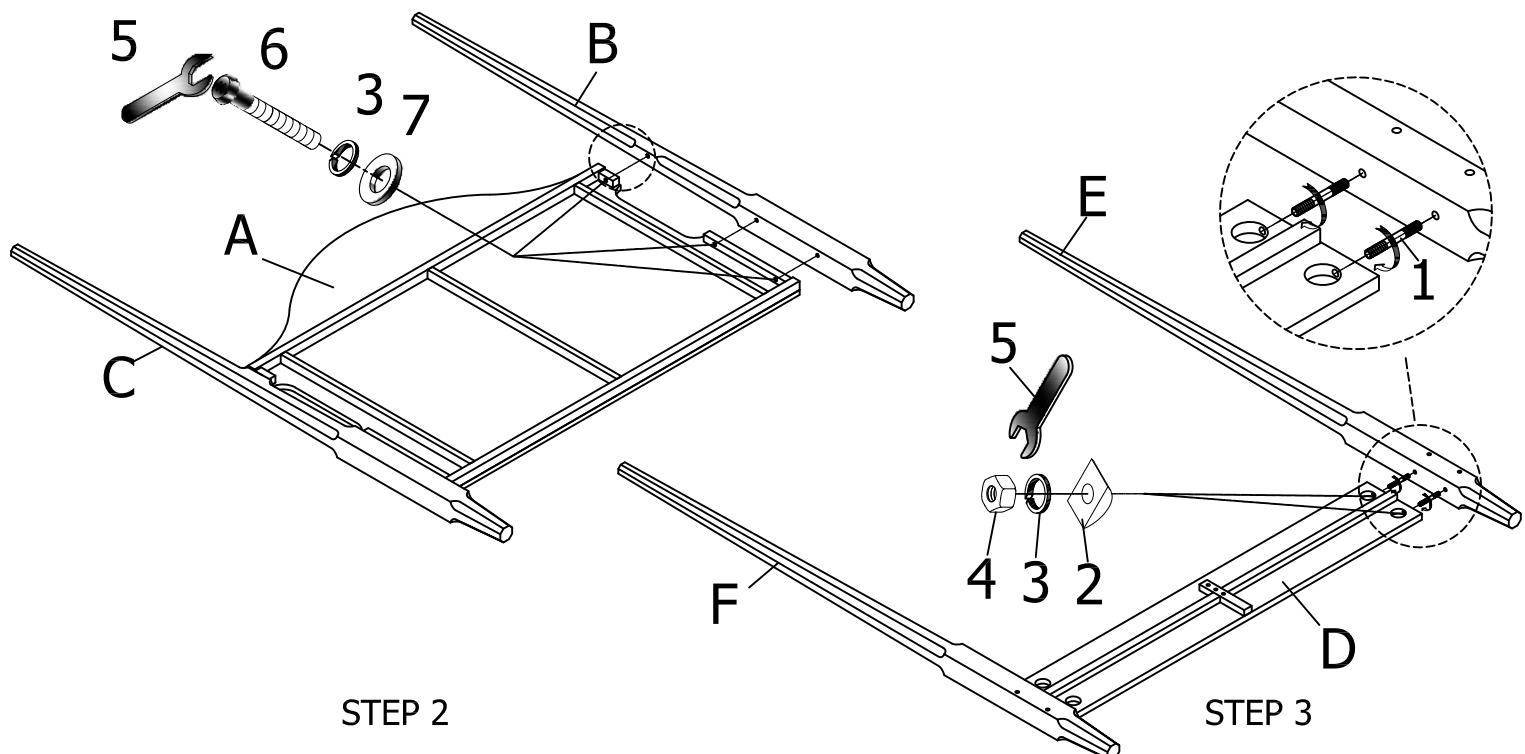

**INSTRUCTION SHEET**

ASSEMBLY INSTRUCTIONS

U033A290/ U033A29FR/U033A29C/U033A29S Boca Grande Key King 66

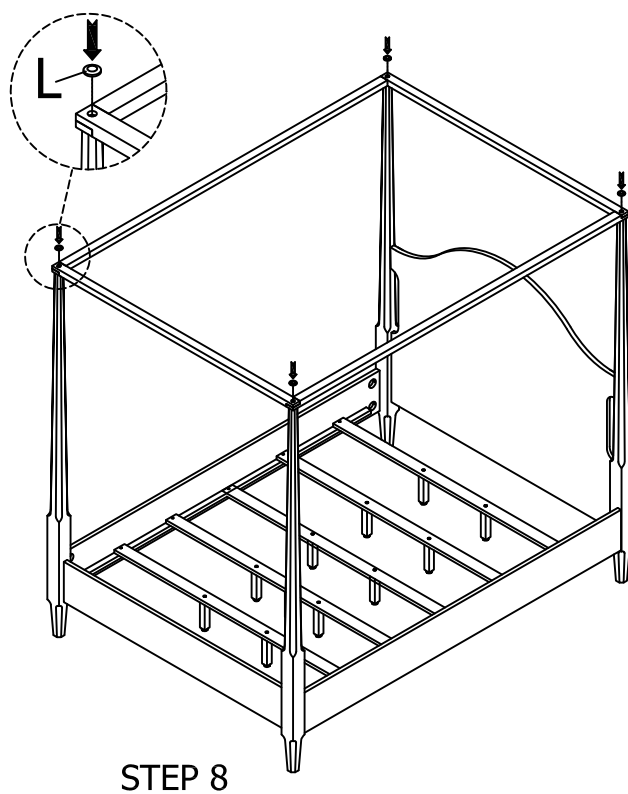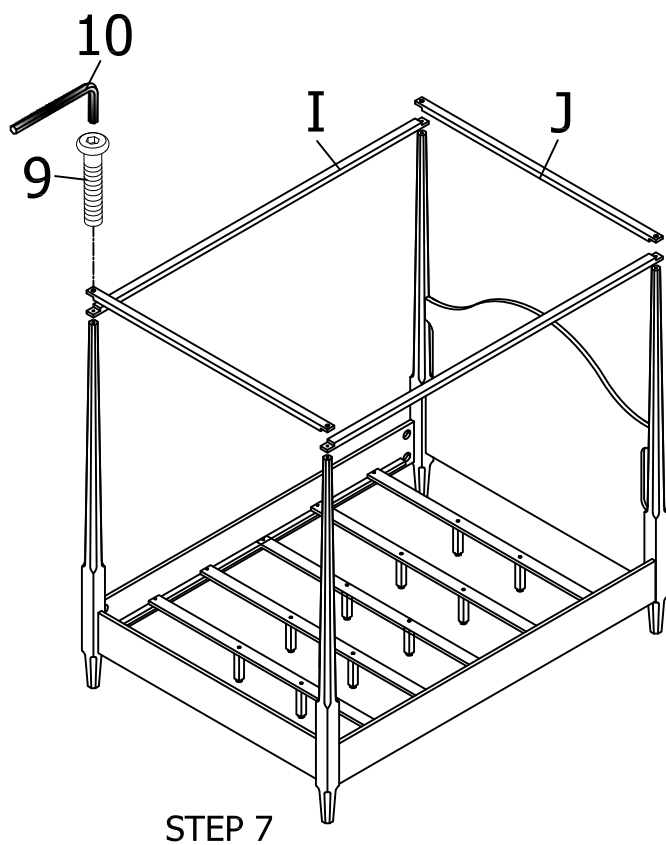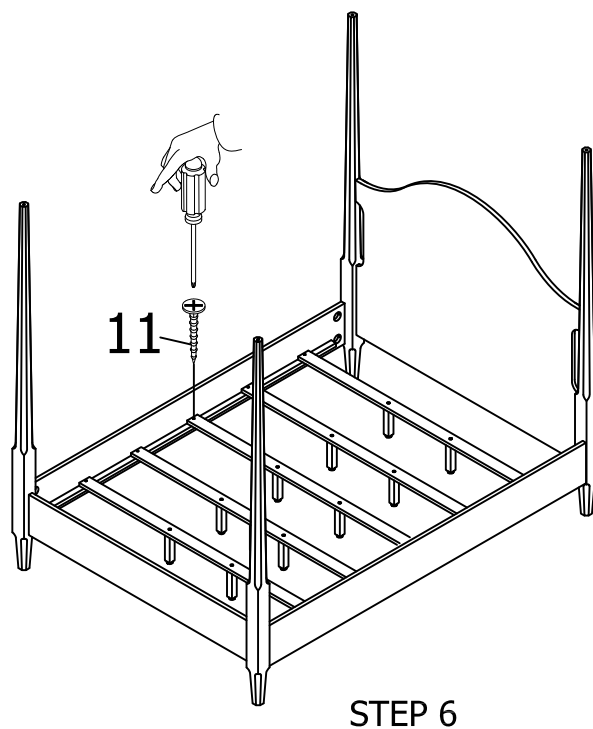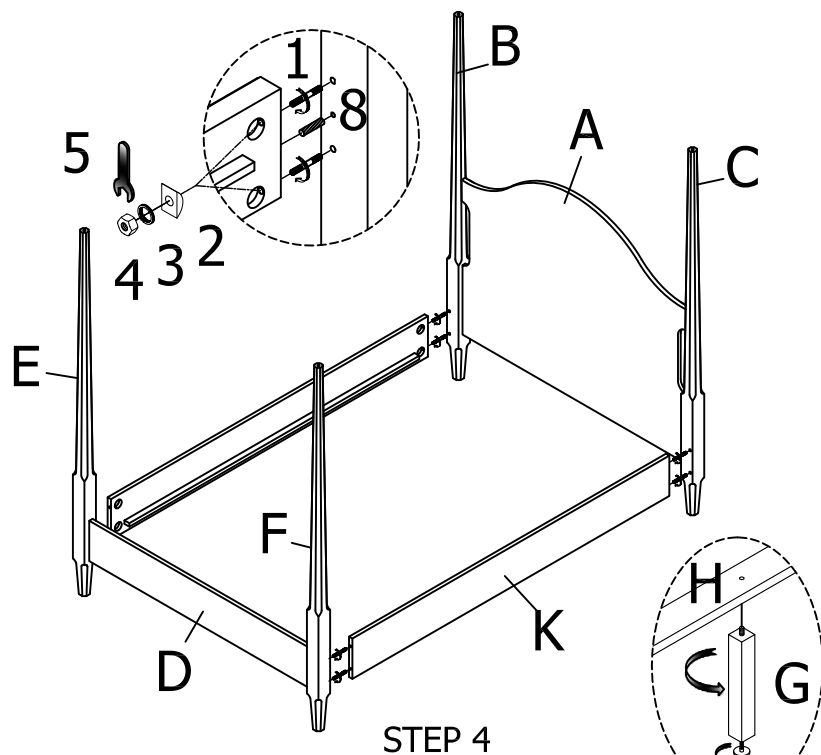

## INSTRUCTION SHEET


ASSEMBLY INSTRUCTIONS U033A290/ U033A29FR/U033A29C/U033A29S Boca Grande Key King 66

### OPTION 2: MATTRESS WITH FOUNDATION

Assembly Procedure: (Please follow the sketches below.)

- Step 1:** Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware. Make sure the quantity of each is correct.
- Step 2:** Assemble Center rail support (N) into Center rail (M).
- Step 3:** Assemble the left headboard post (B) and right headboard post (C) to headboard panel (A) using Hex Head bolt (6), spring washer (3), flat washer (7). Tighten all bolts securely with Wrench (5), but do not over tighten the bolts.
- Step 4:** Assemble the left footboard post (E) and right footboard post (F) to footboard panel (D) using Threaded bolt (1), curve washer (2), spring washer (3), nut (4). Tighten all nuts securely with Wrench (5), but do not over tighten.
- Step 5:** Assemble siderails (C) to headboard posts (B,C) using Threaded bolt (1), curve washer (2), spring washer (3), nut (4). Tighten all nuts securely with Wrench (5), but do not over tighten. Insert the dowel (8) into the Headboard panel (A) as shown. Assemble Center rail (M) to headboard (A) using Threaded bolt (1), curve washer (2), spring washer (3), nut (4). Tighten all nuts securely with Wrench (5), but do not over tighten.
- Step 6:** Insert the dowel (8) into the Footboard panel (D) as shown. Assemble the footboard posts (E,F) to the side rails (K) and Footboard panel (D) to the Center rail (M) using Threaded bolt (1), curve washer (2), spring washer (3), nut (4). Tighten all nuts securely with Wrench (5), but do not over tighten.
- Step 7:** Attach the slat roll (O) on the side rails (K) using screws (11) as shown. Adjust the height of center rail support (N) by turning adjustable levelers located on the bottom of center rail support (N), clockwise to lower and counterclockwise to raise.
- Step 8:** Attach the long canopy (I) and short canopy (J) to the left headboard post (B,C) and left footboard post (E,F) using allen bolt (9). Tighten all bolts securely with allen key (10), but do not over tighten.
- Step 9:** Insert the hole covers (L) inplace as shown.



**Assembly is now complete.**

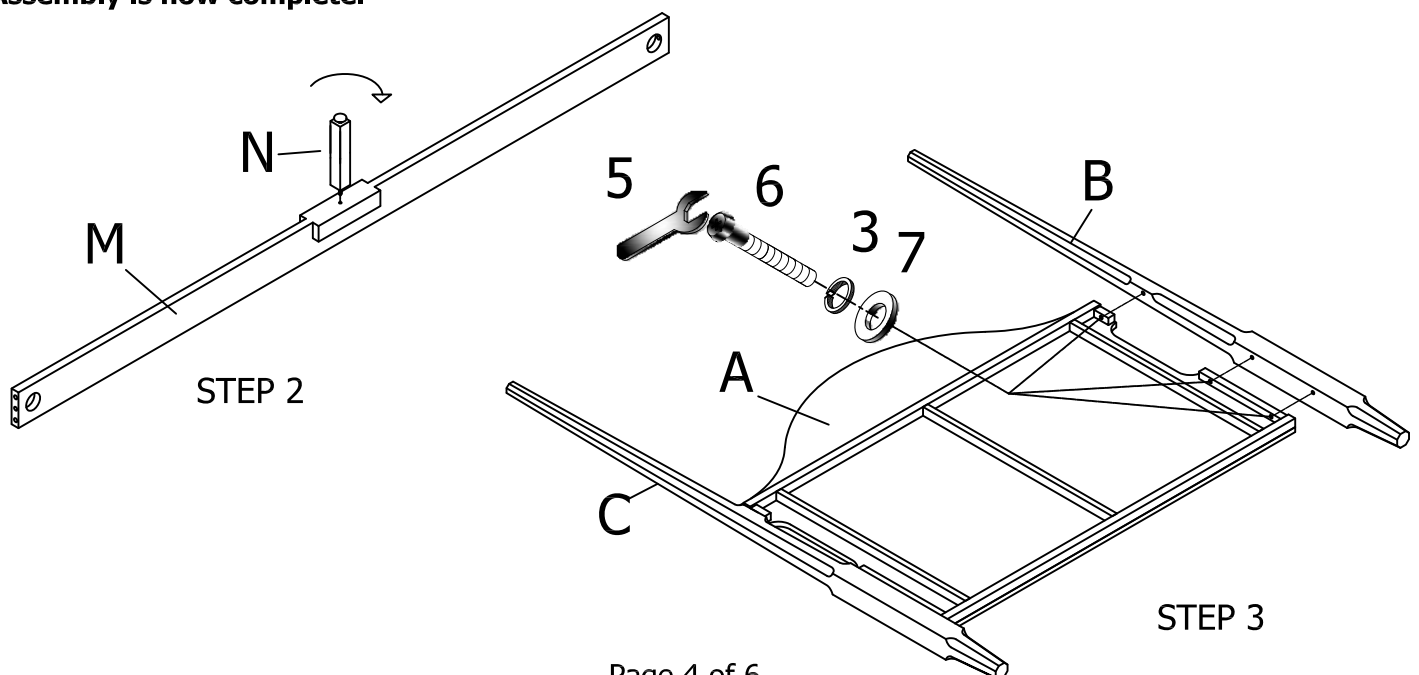

**INSTRUCTION SHEET**

## ASSEMBLY INSTRUCTIONS

U033A290/ U033A29FR/U033A29C/U033A29S Boca Grande Key King 66

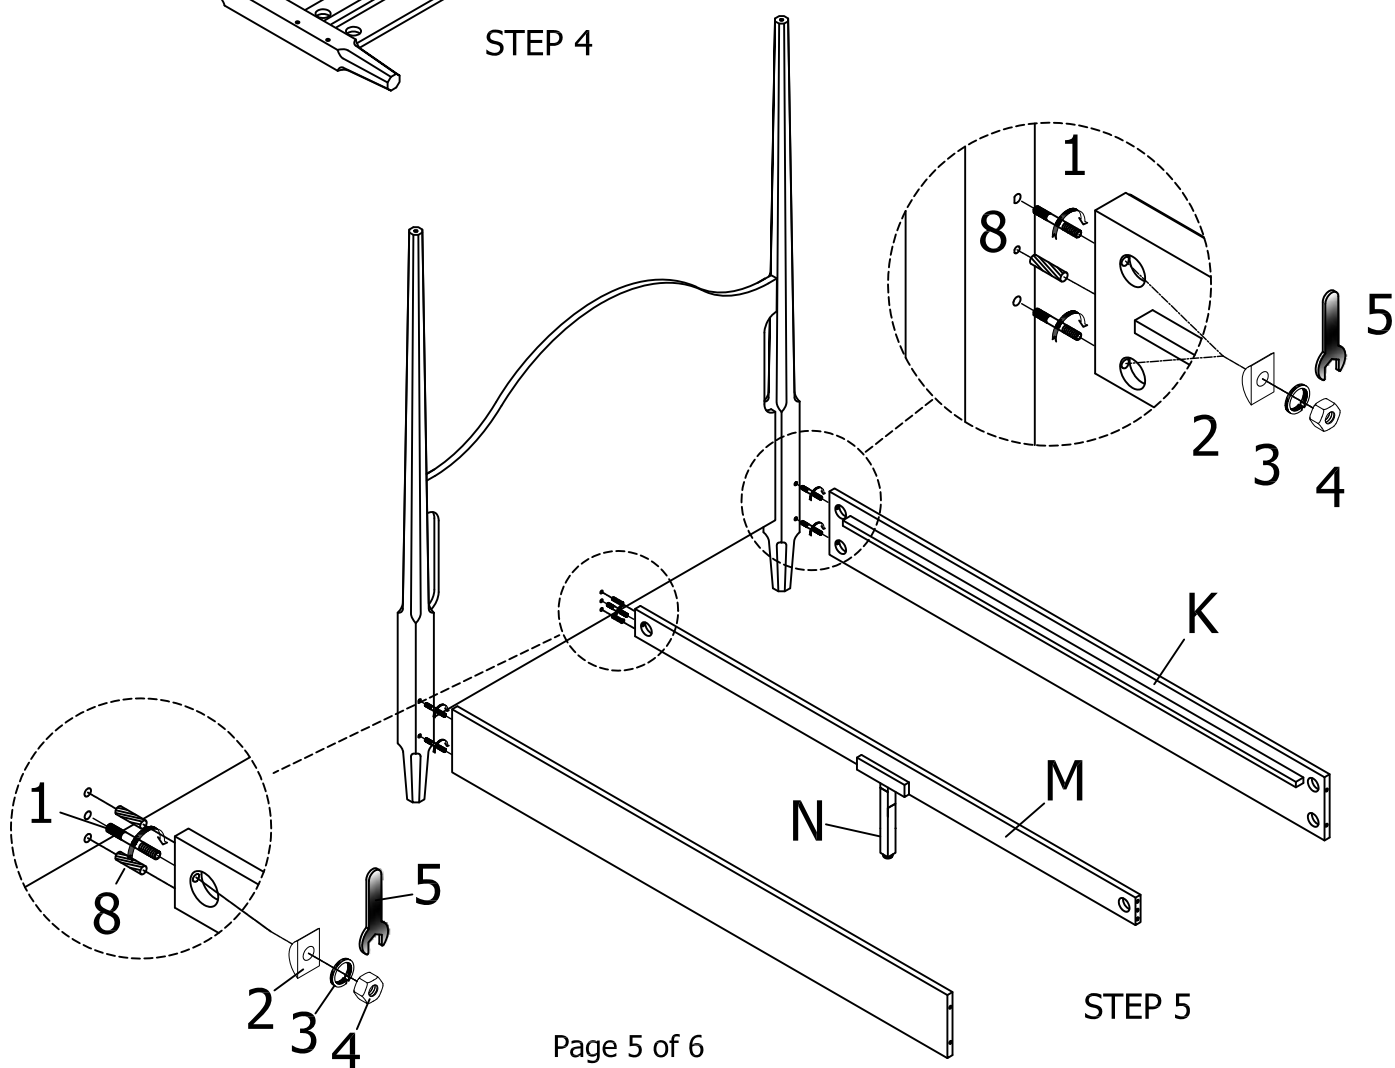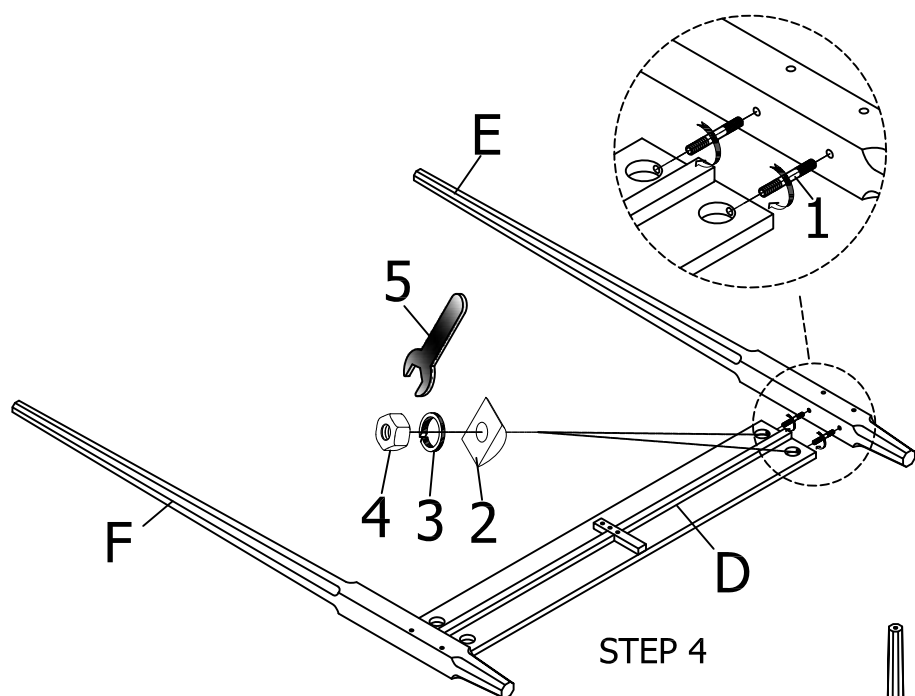

**INSTRUCTION SHEET**

ASSEMBLY INSTRUCTIONS

U033A290/ U033A29FR/U033A29C/U033A29S Boca Grande Key King 66

