

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Caution: (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.

(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.

(3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and or screwdrivers to prevent injury and scratching or damaging flooring.
Note 1: Use only the screws included in the package. Using different sizes could cause the wood to split or come out from the other side.

Note 2: Phillips head screwdriver required for assembly.

Assembly Procedures:

Step 1: Take the piece of felt off the hardware pack and put it at the bottom of the mirror (the side will be attached to the dresser) to avoid scratching to the dresser.


Step 2: Position the mirror frame assembly face down on a carpeted floor, position the wood supports on the back of the mirror posts so that half of the wood supports are below the post.

Step 3: Place mirror frame assembly on the Dresser/Bureau and align the center mark on back of mirror frame assembly with the center mark on the Dresser/Bureau.

Step 4: Attach the mirror frame assembly by using wood screws.

Note: The mirror can be hung on the wall using the pre-assembled D-ring hooks on the back of the mirror.

If leveling is needed, adjust leveler located on the bottom center of the Dresser/Bureau as shown. If the mirror doesn't have any hooks, pls ignore it.

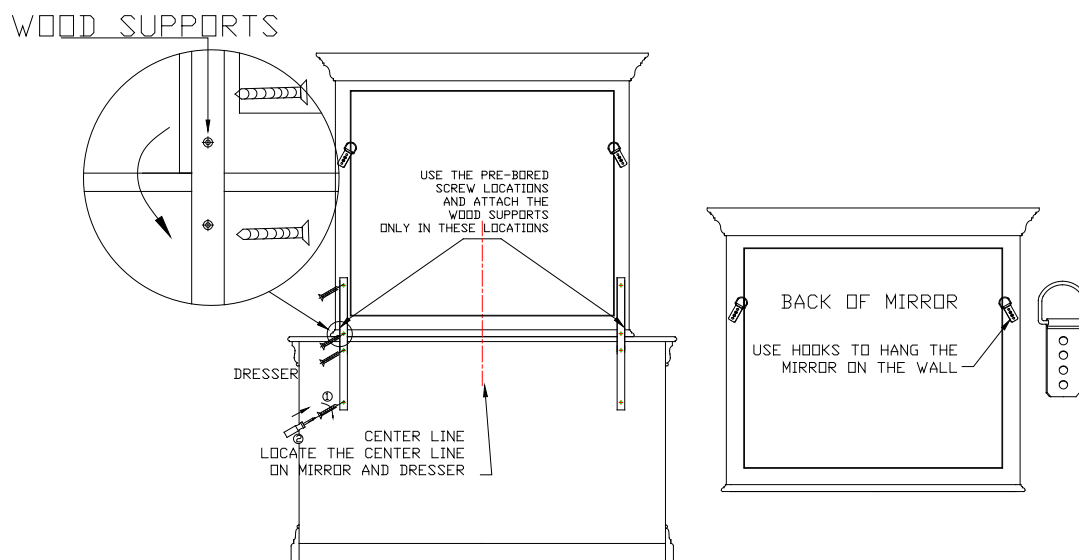

Assembly is now complete.