

## INSTRUCTION SHEET

847220/22FR/212W  
847210/21FR/212W

BACALL BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

**Caution:** (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.

(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.







(3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and or screwdrivers to prevent injury and scratching or damaging flooring.

(4) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the above mentioned components is attached to the furniture properly and kept tightened at all times.





## PARTS LIST:

#	Description	Qty.	#	Description	Qty.
A	Headboard	1PC	B	Bed wall panel	2PCS
C	Side rail	2PCS	D	Footboard	1PC
E	Slat panel	2PCS	F	Center support	4PCS
G	Wall Pad	2PCS	H	Metal salt	1PCS
I	Metal rail	1PCS			






## Assembly footboard/side rail pack

1	BOLT	 5/16"×3"	8PCS
2	CURVED WASHER	 27.5×8×15mm	8PCS
3	SPRING WASHER	 5/16"	8PCS
4	NUT	 13×13×5mm	8PCS
5	SCREW	 8×1-1/4"	4PCS
6	WRENCH	 87×19mm	1PC

## Assembly bed wall panel pack

7	Mending Plate	 100×40×2mm	6PCS
8	Flat Washer	 1/4"×16×1.5mm	12PCS
9	Bolt	 1/4"×1-1/2"	12PCS
10	Wrench	 10-12mm	1PC

## Assembly metal hardware pack

11	NUT	 5/16"	2PCS
12	Flat Washer	 5/16"×23×2mm	12PCS
13	Bolt	 5/16"×2-3/4"	2PCS
14	Bolt	 5/16"×1"	10PCS
15	Wrench	 10-12mm	1PC

## INSTRUCTION SHEET

847220/22FR/212W  
847210/21FR/212W

BACALL BED


Assembly Procedure: (Please follow the sketches below.)

- Step 1:** Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware. Make sure the quantity of each is correct.
- Step 2:** Put the all parts on a soft and smooth surface to avoid damage or being scratched. .Attach the metal rail (I) to the metal slat (H) with nuts (11), flat washers (12) and bolts (13) using wrench (15).
- Step 3:** Assemble side rails (C) with headboard (A) using bolts (1), curved washers (2), spring washers (3) and nuts (4). Tighten them by wrench (6).
- Step 4:** Attach the metal slat (H) to side rail (C) with flat washer(12),Bolt (14) using wrench(15).
- Step5:** Attach the footboard (D) to the side rail(C) with bolts (1), curved washers (2), spring washers (3) and nuts (4). Tighten them by wrench (6).
- Step 6:** Attach the footboard (D) to the metal rail(I) with flat washer (12),Bolt (14) using wrench(15).
- Step 7:** Screw center supports (F) into slat panels (E).Put slat panels (E) onto the inside notches of side rails (C), tighten them with screws (5) by screwdriver (not provided).
- Step 8:** Assemble bed wall panel (B) to headboard (A) using mending plate (7), flat washers (12), bolt (13). Tighten them by wrench(10). Screw wall pad (G) into headboard back and bed wall panel back .


**Note:** 847210/21FR/212W bed has 2pcs center support.

**Assembly is now complete.**

## Step 2

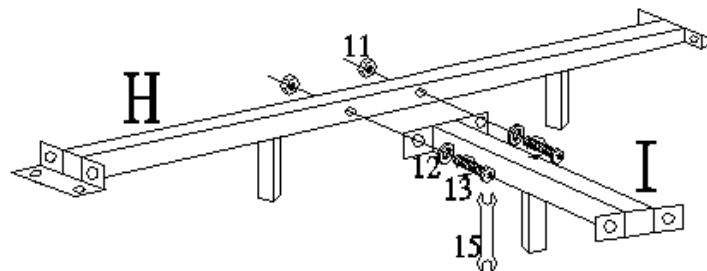

## Step 3



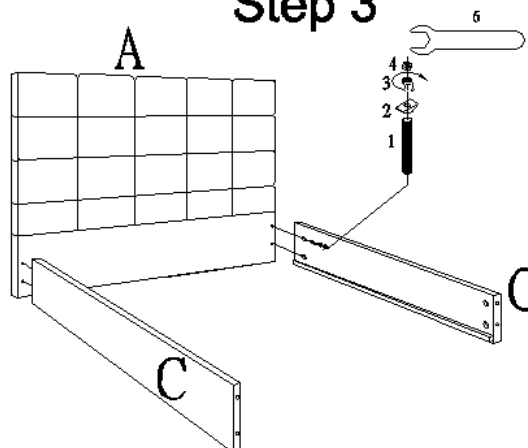


## INSTRUCTION SHEET

847220/22FR/212W  
847210/21FR/212W

BACALL BED

## Step 4

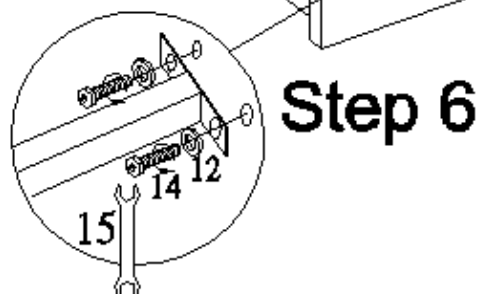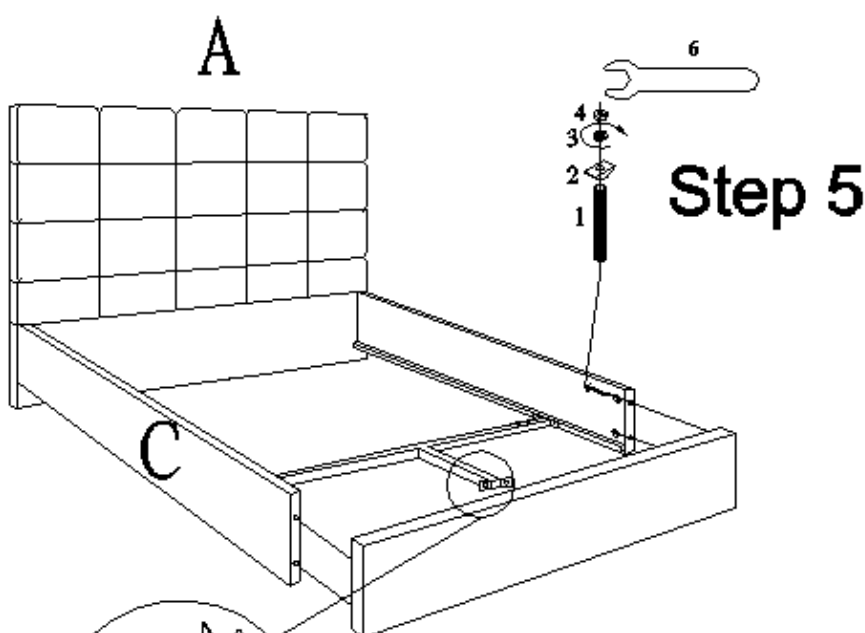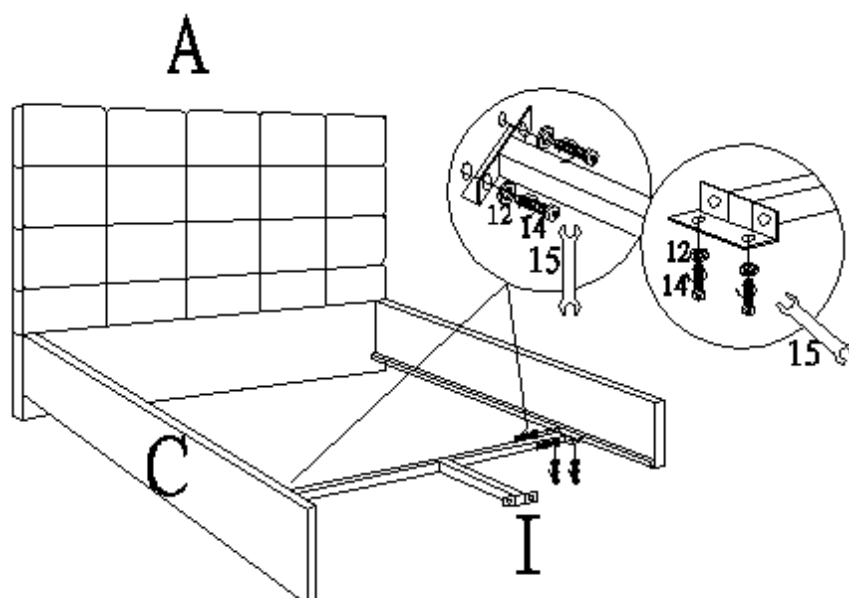

## INSTRUCTION SHEET

847220/22FR/212W  
847210/21FR/212W

BACALL BED

