



	LIST HAI	RDWARE	
A		BRACKETS	8
В		JCBC BOLT M6 X 60MM	9
С	0	FLAT WAHSER M6 x Ø18MM SS	8
D	Ø	SPRING WAHSER M6 x Ø11MM SS	8
E	P	NUT M6	8
F		HEX KEY L4	1
G	$\sum$	WRENCH 10	1
н		FAB SCREW Ø8 X 1.5" SS	16

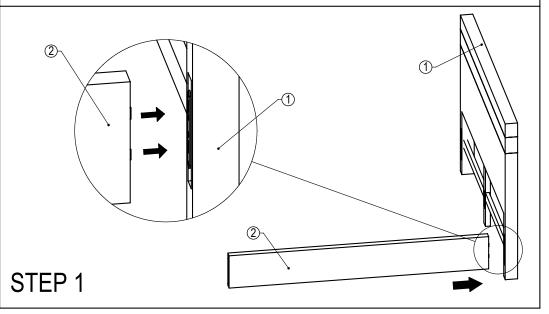

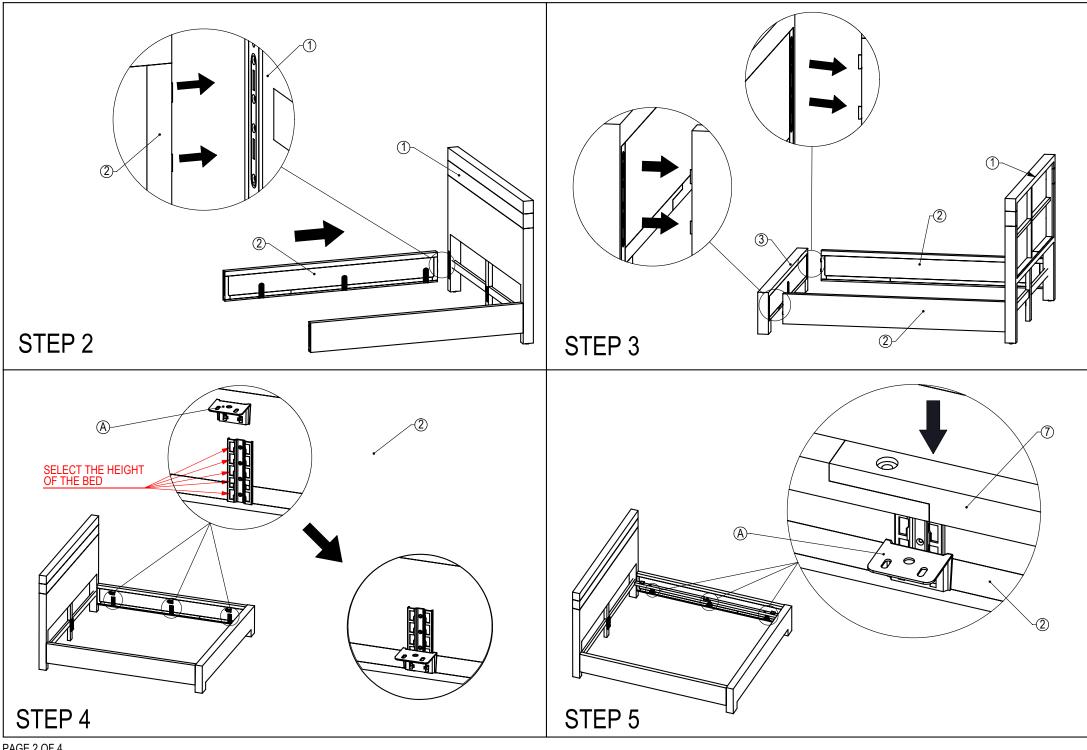

PAGE 2 OF 4

SELECT THE HEIGHT OF THE BED B 7 -(F) (1 ଚ A) C 0 SELECT THE HEIGHT OF THE BED D (3) Œ S G A STEP 6 STEP 7 -B (1)0 0 ິ -(4) 0 (4)  $\odot$ (Ĉ) 9 . -D E STEP 8 STEP 9

