

INSTRUCTION SHEET

Sleigh Bed/Post Bed

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Caution: (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.

(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.

(3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and or screwdrivers to prevent injury and scratching or damaging flooring.

(4) During normal use everyday, bolts and nuts may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list is attached to the furniture and kept tightened at all times.

PARTS LIST:

#	Description	Qty.	#	Description	Qty.
A	Headboard	1 pc	B	Footboard	1 pc
C	Side Rail	2 pcs	D	Slat Roll	1 pc
E	Bun Foot	2 pcs			

Assembly Procedure: (Please follow the sketches below.)

Step 1: Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware. Make sure the quantity of each is correct.

Step 2: Screw the bun foot (E) into the pre-drilled holes under the footboard (B).







Step 3: Insert the dowels (1) into the pre-drilled holes at both end of side rails (C). Attach the side rails to the headboard (A) and footboard (B) with brackets (2), lock washers (3), nuts (4) and use the spanner (5) to tighten them.


Step 4: Screw the slat roll (D) onto side rails (C) with wood screws (6) by using phillip head screw driver (not provided).

Step 5: Disregard this step if the bed has no finials. Screw the finials (4 pcs) into the pre-drilled holes on the headboard and footboard. (Refer to sketch).

Assembly is now complete.

HARDWARE LIST:

1	Dowel		8 PCS	4	Nut		8 PCS
2	Bracket		8 PCS	5	Spanner		1 PC
3	Lock Washer		8 PCS	6	Wood Screw		8PCS

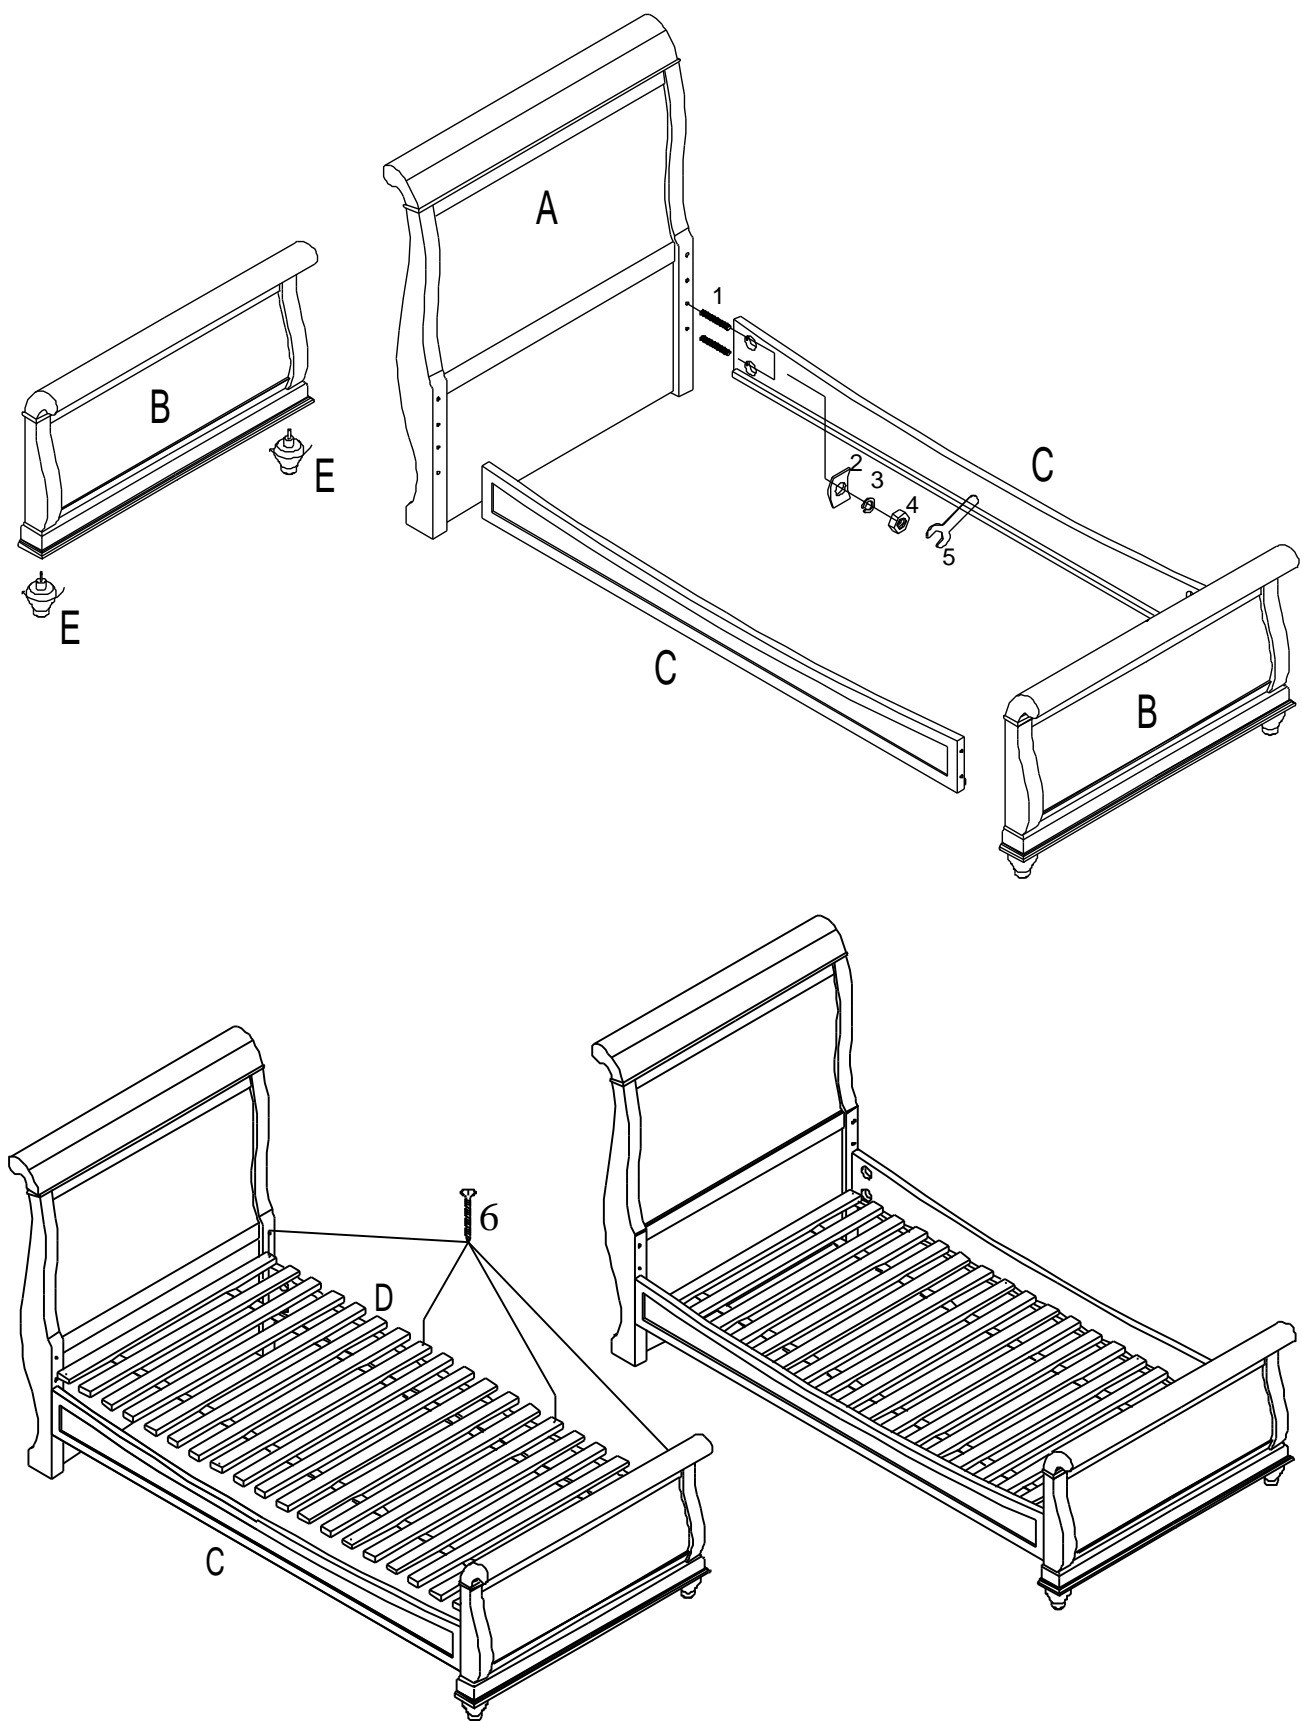

Follow this sketch if bed has finial/post

