

INSTRUCTION SHEET

356310	URBAN SLEIGH HEADBOARD/FOOTBOARD 5/0
35631R	URBAN SLEIGH BEDRAIL 5/0
356320	URBAN SLEIGH HEADBOARD/FOOTBOARD 6/6
35633R	URBAN SLEIGH BEDRAIL 6/6
356330	URBAN SLEIGH HEADBOARD/FOOTBOARD 6/0
35633R	URBAN SLEIGH BEDRAIL 6/0

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Caution: (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.

(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.

(3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and or screwdrivers to prevent injury and scratching or damaging flooring.

(4) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the above mentioned components is attached to the furniture properly and kept tightened at all times.

PARTS LIST:

#	Description	Qty.	#	Description	Qty.
A	Footboard	1 pc	E	Metal Slat	3 pcs
B	Headboard	1 pc	F	Side Rail	2 pcs
C	Foot	4 pcs	G	Hardware Pack	1 bag
D	Support Leg	6 pcs			

Assembly Procedure: (Please follow the sketches below.)

Step 1: Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware. Make sure the quantity of each is correct.

Step 2: Attach the threaded rod (1) to the footboard (A) and then fix the foot (C) to the footboard (A) shown as the sketch. Please tighten the hardware for this step.

Step 3: Fix the foot (C) to the headboard (B) with the flat washer (3) and flat head bolt (2), please tighten the bolts for this step.

Step 4: Fix the support leg (D) to the metal slat (E) with the flat head bolt (5), please tighten the bolts for this step. And then attach the leveler (10) to the support leg (D).











Step 5: Attach the side rail (F) to the footboard (A) with the flat head bolt (4) and headboard with the flat head bolt (5) and the nut (6) shown as the sketch.

Step 6: Fix the metal slat (E) to the side rail (F) with the flat head bolt (5) and the nut (6) shown as the sketch.


Please tighten all the bolts and adjust the leveler if needed. Assembly is now complete.

INSTRUCTION SHEET


Hardware Pack (G)

1	THREADED ROD		5/16"*2"	2PCS
2	FLAT HEAD BOLT		5/16"*3/4"	2PCS
3	FLAT WASHER		5/16"	2PCS
4	FLAT HEAD BOLT		1/4"*1"	4PCS
5	FLAT HEAD BOLT		1/4"*5/8"	28PCS
6	NUT		1/4"	16PCS
7	ALLEN WRENCH		1/4"	1PC
8	ALLEN WRENCH		5/16"	1PC
9	OPEN WRENCH		1/4"	1PC
10	LEVELER		1/4"*29	6PCS

Step2

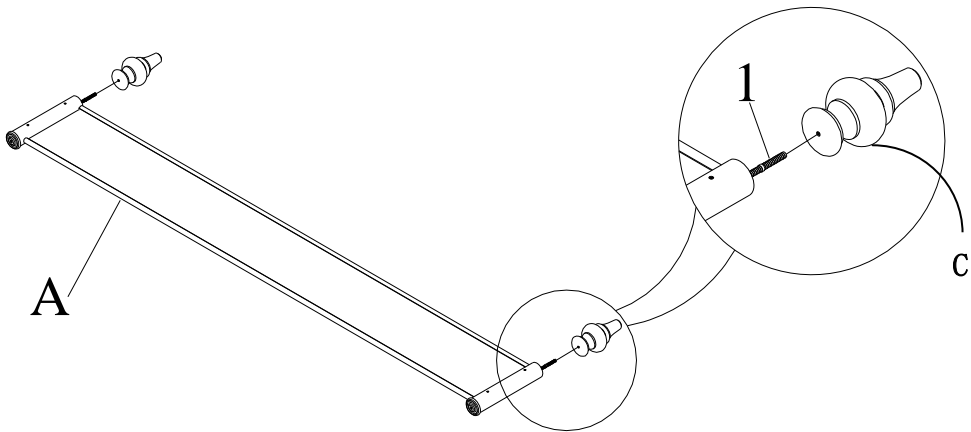


Step3

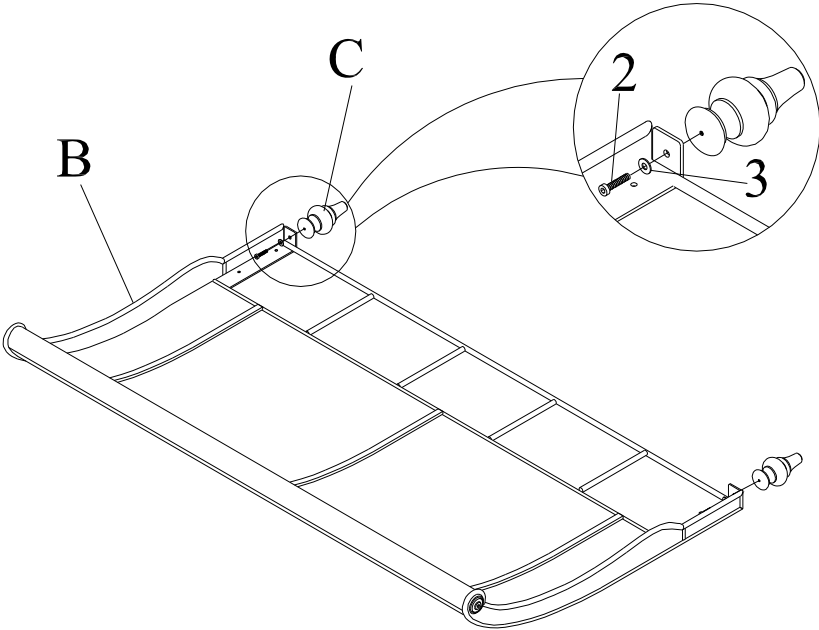


INSTRUCTION SHEET

Step4

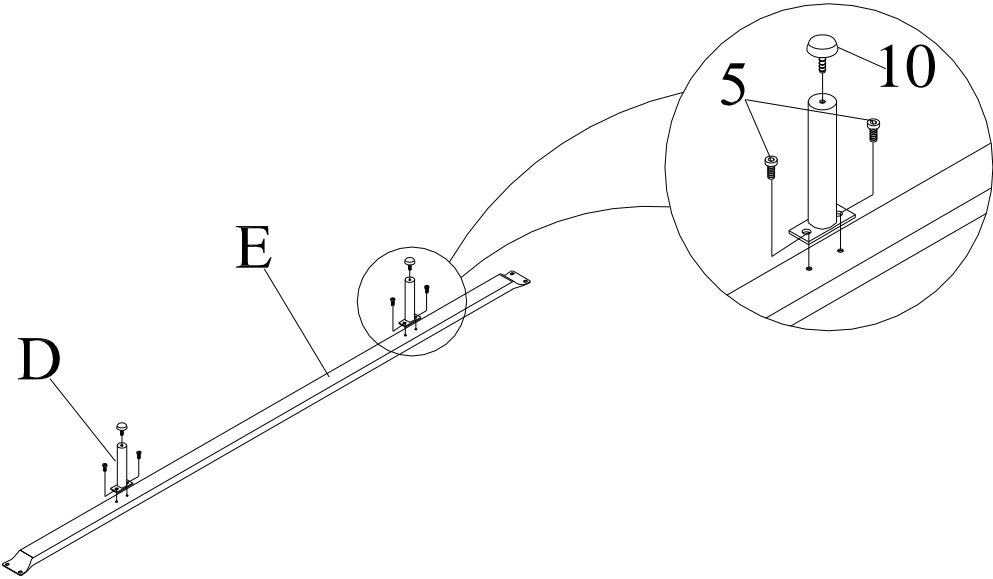

Step5

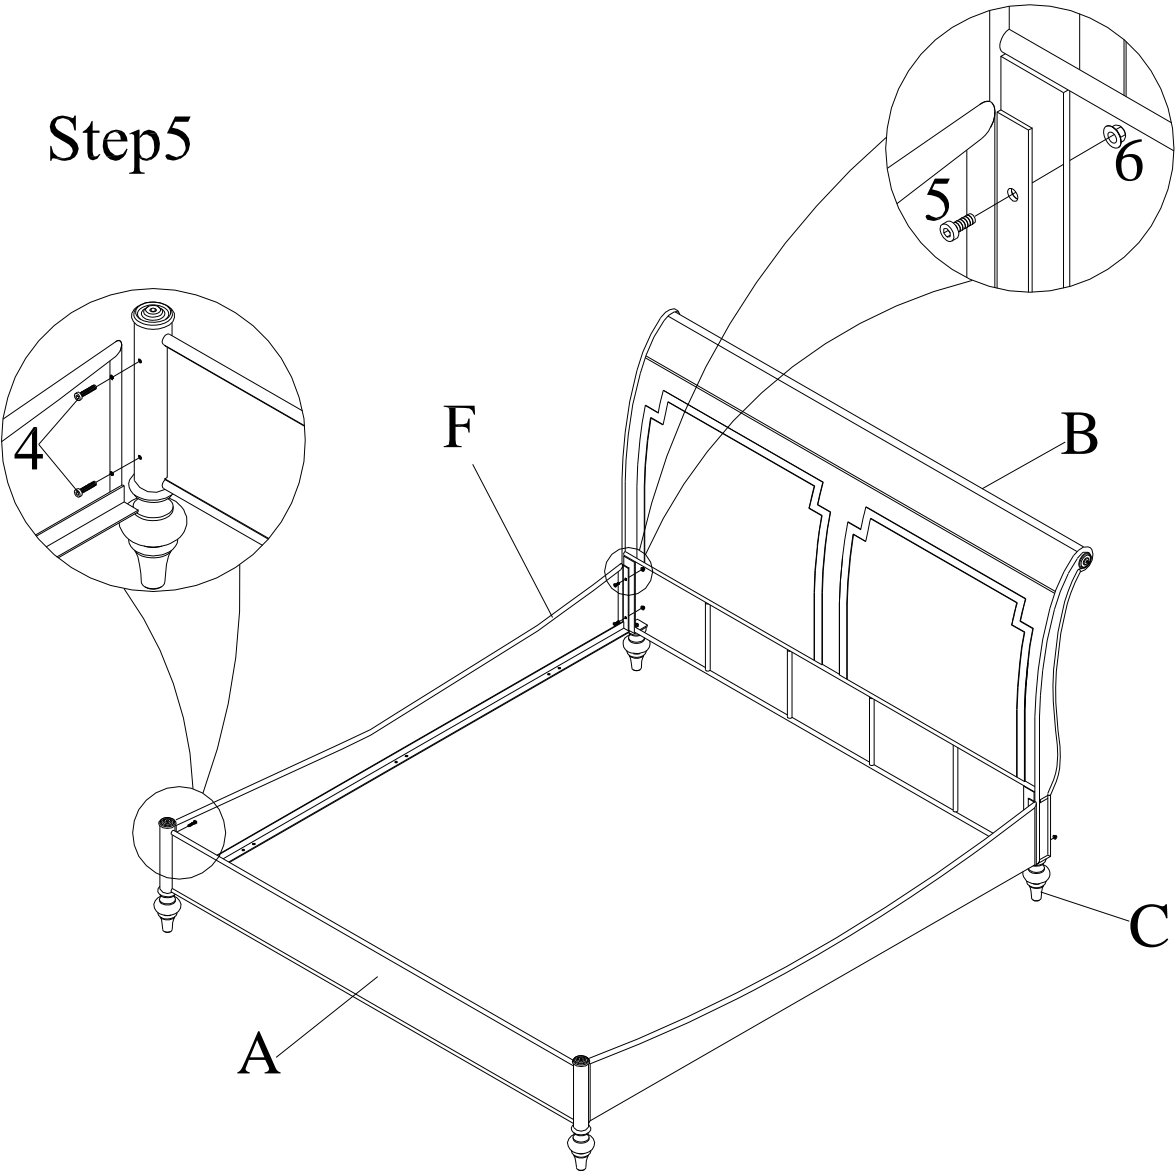

INSTRUCTION SHEET

Step6

