

INSTRUCTION SHEET

543B280/28R
 543B290/29R
 543B291/291R

Respite Bed 5/0 6/6 6/0

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Caution: (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.

(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.

(3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and or screwdrivers to prevent injury and scratching or damaging flooring.

(4) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the above mentioned components is attached to the furniture properly and kept tightened at all times.

PARTS LIST:

#	Description	Qty.	#	Description	Qty.
A	Headboard	1pc	B	Footboard	1pc
C	Side Rail	2pcs	D	Slat	3pcs
E	Support Leg	3pcs	F	Headboard Post	2pcs
G	Footboard Post	2pcs	H	Short Canopy	2pcs
I	Long Canopy	2pcs	J	Finial	4pcs

Assembly Procedure: (Please follow the sketches below.)

Step 1: Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware. Make sure the quantity of each is correct.

Step 2: Put the headboard (A) and footboard (B) upright down on a soft and smooth surface to avoid damage or being scratched. Attach the side rails (C) to the headboard (A) and footboard (B) with flat washers (3), spring washers (4) and nuts (5) using wrench (6). And attach the support legs (E) to the slats (D) by hand. Then attach the slats (D) the side rails (C) with allen head bolt (7) and flat washer (8) using allen wrench (9).

Step 3: Attach the posts (F, G) to the headboard (A) and footboard (B) by hand. And then connect the short canopy (H) with Long canopy (I) with bolts (1) using lug wrench (2).

Step 3: Attach the canopies (H,I) and finial (J) to the posts (F,G) by hand as below shown.

Note: 543290/29R/291/291R have 6 pieces support legs.



Assembly is now complete.

HARDWARE LIST(K)			Q'TY	HARDWARE LIST(K)			Q'TY
1	BOLT	 5/32*1/2"	4 PCS	6	WRNCH	 M12	1 PC
2	LUG WRENCH	 70*30*4mm	1 PC	7	ALLEN HEAD BOLT	 1/4*3/4"	6 PCS
3	FLAT WASHER	 5/16*19*2MM	8 PCS	8	FLAT WASHER	 1/4*19*2MM	6 PCS
4	SPRING WASHER	 5/16*13*2mm	8 PCS	9	ALLEN WRENCH	 70*30*4MMM	1 PCS
5	NUT	 5/16	8 PCS				



INSTRUCTION SHEET

543B280/28R
543B290/29R
543B291/291R

Respite Bed 5/0 6/6 6/0

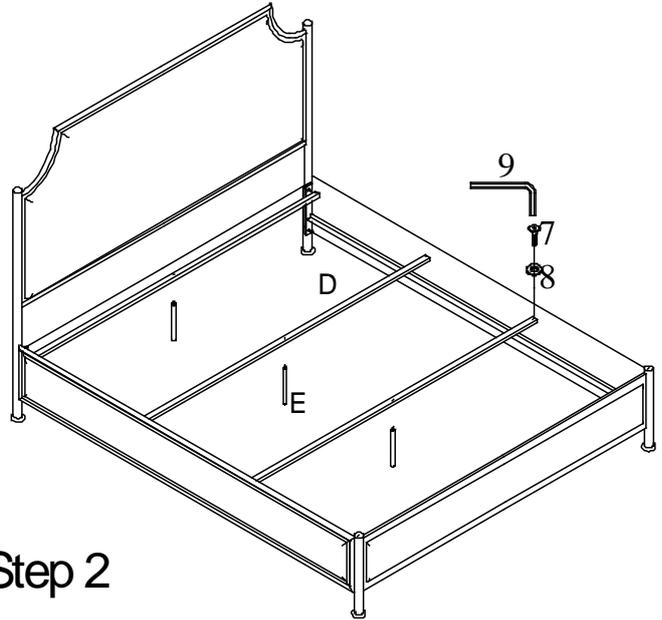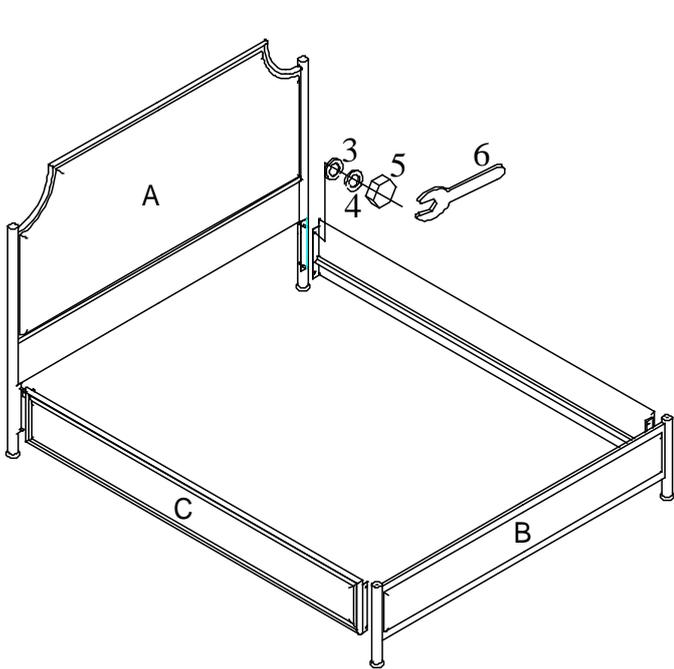

Step 2

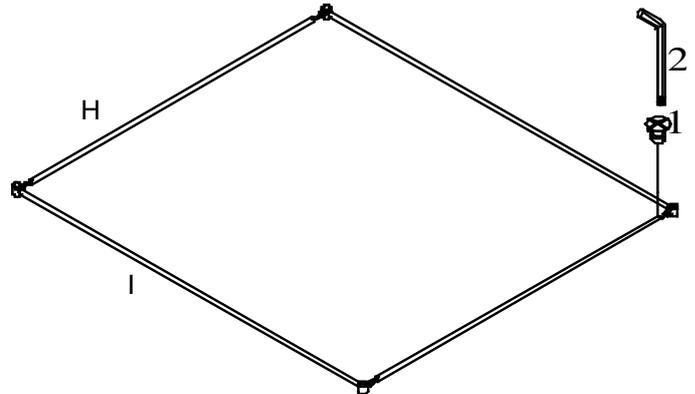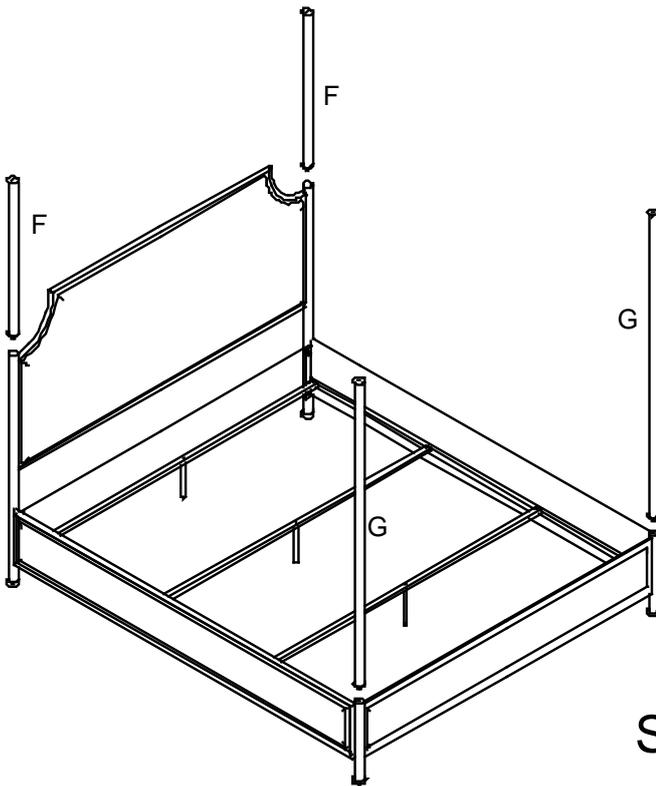


Step 3

INSTRUCTION SHEET

543B280/28R
543B290/29R
543B291/291R

Respite Bed 5/0 6/6 6/0

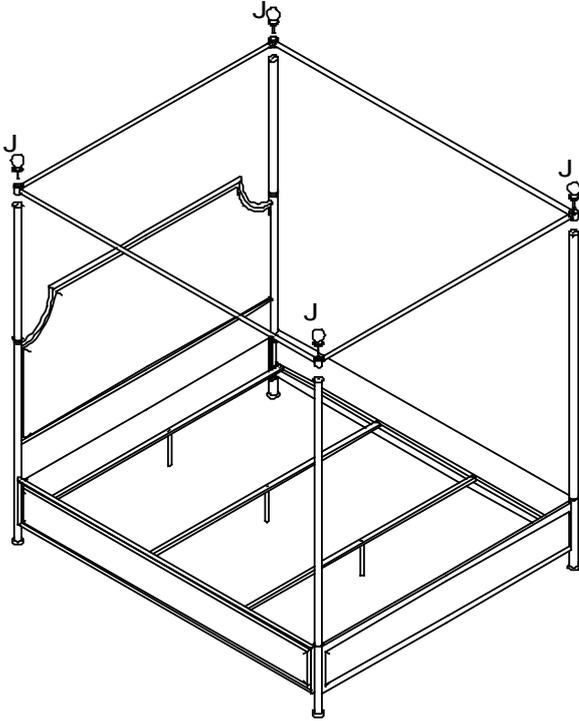

Step 4

