UNIVERSA

INSTRUCTION SHEET

U225210/U225210FR

SUMMERLAND UPHOL BED QUEEN

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Caution: (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.

(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.

(3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and (or) screwdrivers to prevent injury and scratching or damaging flooring.

(4) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the above mentioned components is attached to the furniture properly and kept tightened at all times.

А	Headboard		1PC			
В	Footboard		1PC			
С	Side rail	- - 	2PCS			
D	Slat	0	5PCS			
Е	Center Support	Ű	5PCS			
F	HB Metal Leg	Ť	2PCS			

PART LIST

HEADBOARD HARDWARE PACK

1	Bolt		5/16" *3"	8PCS	
2	Curved washer	Ð	27.5*8*15mm	8PCS	
3	Spring washer	C	5/16"	8PCS	
4	Nut	۲	13*13*5mm	8PCS	
5	Screw	Ominicipa	8*1-1/4"mm	10PCS	
6	Wrench	2	87*12mm	1PC	

METAL LEG HARDWARE PACK

7	Bolt		5/16 ″ *1″	4PCS
8	Spring washer	5	5/16 " *23*2mm	4PCS
9	Washer	O	5/16″	4PCS

EXPLORE HOME™

INSTRUCTION SHEET

U225210/U225210FR

SUMMERLAND UPHOL BED QUEEN

versai

Assembly Procedure: (Please follow the sketches below.)

Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware. Make sure the quantity of each is correct

Step 1: Assemble HB Metal Leg (F) with Headboard (A) using Bolt (7), Spring Washer (8), Washer (9).


Step 2: Assemble Side Rail (C) with Headboard (A)&Footboard (B) using Bolt (1), Curved Washer (2), Spring washer (3), Nut (4). Tighten them by Wrench (6).


Step 3: Screw center support (E) to the Slat (D).


Step 4: Put Slat (D) onto the inside notches of Side rails (C), tighten them with Screws (5) by screwdriver (not provided).

Note: U225210/U225210FR bed has 5pcs center support.

Assembly is now complete.

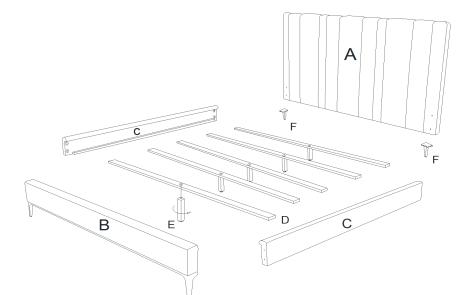

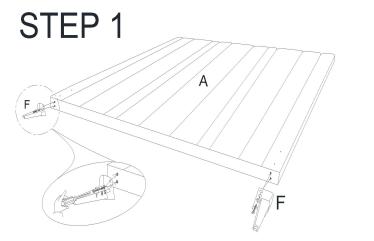

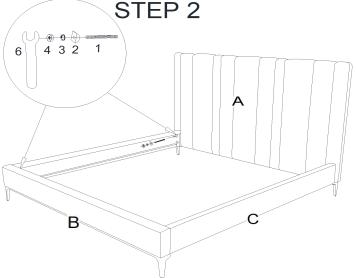



INSTRUCTION SHEET

U225210/U225210FR

SUMMERLAND UPHOL BED QUEEN

