

INSTRUCTION SHEET

U225220/U225220FR

SUMMERLAND UPHOL BED KING

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.







Caution: (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.

(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.







(3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and (or) screwdrivers to prevent injury and scratching or damaging flooring.

(4) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the above mentioned components is attached to the furniture properly and kept tightened at all times.




PART LIST

A	Headboard		1PC
B	Footboard		1PC
C	Side rail		2PCS
D	Slat		5PCS
E	Center Support		10PCS
F	HB Metal Leg		2PCS

HEADBOARD HARDWARE PACK

1	Bolt		5/16" *3"	8PCS
2	Curved washer		27.5*8*15mm	8PCS
3	Spring washer		5/16"	8PCS
4	Nut		13*13*5mm	8PCS
5	Screw		8*1-1/4"mm	10PCS
6	Wrench		87*12mm	1PC

METAL LEG HARDWARE PACK

7	Bolt		5/16" *1"	4PCS
8	Spring washer		5/16" *23*2mm	4PCS
9	Washer		5/16"	4PCS

INSTRUCTION SHEET

U225220/U225220FR

SUMMERLAND UPHOL BED KING

Assembly Procedure: (Please follow the sketches below.)

Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware. Make sure the quantity of each is correct

Step 1: Assemble HB Metal Leg (F) with Headboard (A) using Bolt (7), Spring Washer (8), Washer (9).

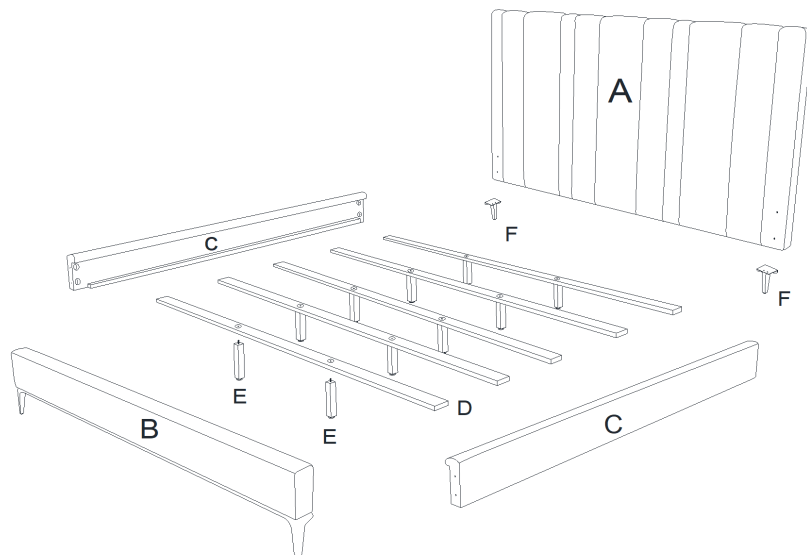
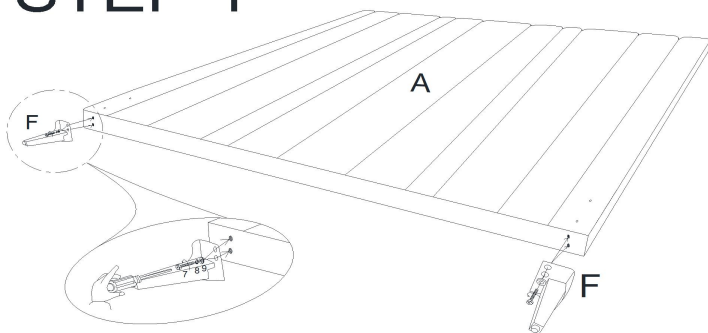
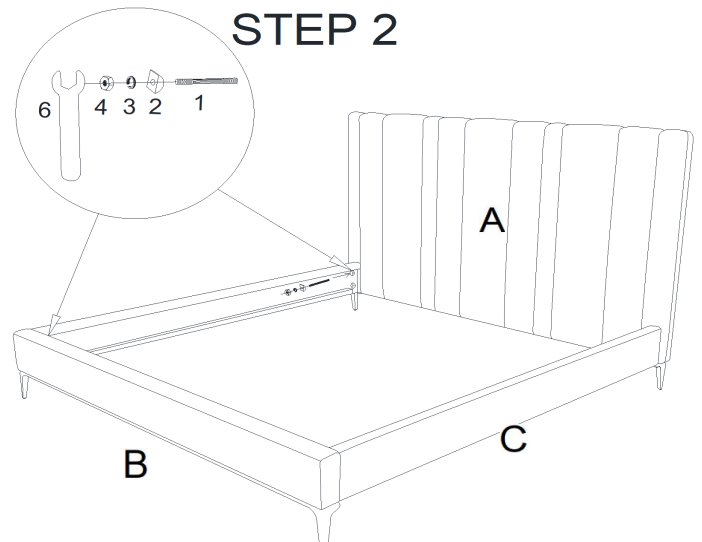
Step 2: Assemble Side Rail (C) with Headboard (A)&Footboard (B) using Bolt (1), Curved Washer (2), Spring washer (3), Nut (4). Tighten them by Wrench (6).

Step 3: Screw center support (E) to the Slat (D).

Step 4: Put Slat (D) onto the inside notches of Side rails (C), tighten them with Screws (5) by screwdriver (not provided).

Note: U225220/U225220FR bed has 10pcs center support.

Assembly is now complete.

**STEP 1****STEP 2**

INSTRUCTION SHEET

U225220/U225220FR

SUMMERLAND UPHOL BED KING

STEP 3

