ASSEMBLY INSTRUCTIONS

U225A310/U225A310F/U225A310R Morada Bed Queen U225A320/U225A320F/U225A310R Morada Bed King

Thank you for purchasing this quality product. Be sure check all packing material carefully for small parts that may have come loose inside the carton during shipping.

- **Caution:** (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.
- (2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.
- (3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and or screwdrivers to prevent injury and scratching or damaging flooring.
- (4) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the above mentioned components is attached to the furniture properly and kept tightened at all times.

Parts List:

Description	Sketch	QTY	Description	Sketch	QTY
Headboard		1 pc	Right Side Rail (F)	Marson II	1 pc
Upholstery (A)			Left Side Rail (G)		1 pc
			Long Metal Frame (H)	• • • • • • • • • • • • • • • • • • • •	1 pc
Right Headboard post (B)	(: · · · · · · · · · · · · · · · · · · ·	1 pc	Short Metal Frame (J)		1 pc
Left Headboard post (C)		1 pc	Center rail leg (K)	€	1 pc
Left fleadboard post (e)	, , , , , , , , , , , , , , , , , , ,		Center Rail (L)		1 pc
Cross Bar (D)	<i>'</i>	1 pc			1 pc
Footboard (E)		1 pc	Slat Roll (M)		

Side Rail Hardware List:

1	Threaded bolt	5/16"x3"		10 pcs	7	Curved washer	5/16"	0	10 pcs
2	Hex Head bolt	5/16"x2"		8 pcs	8	Nut	5/16"		12 pcs
3	Hex Head bolt	5/16"x1"	(((C)	10 pcs	9	Wood dowel	Ø8x30mm		8 pcs
4	Hex Head bolt	5/16"x2-1/4"	((((((((((((((((((((((((((((((((((((((2 pcs	10	Wood dowel	Ø10x40mm		4 pcs
5	Spring washer	5/16"	O	32 pcs	11	Wrench	12mm		2 pcs
6	Flat washer	5/16"x19mm	0	22 pcs	12	Screw	#8x1-1/4"		12 pcs

EXPLORE HOME UNIVERSAL

INSTRUCTION SHEET


ASSEMBLY INSTRUCTIONS

Assembly is now complete.

U225A310/U225A310F/U225A310R Morada Bed Queen U225A320/U225A320F/U225A310R Morada Bed King

Assembly Procedure: (Please follow the sketches below.)

- Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware. Make sure the quantity of Step 1: each is correct.
- Step 2: Assemble Right headboard post (B) and Left headboard post (C) to cross bar (D) and headboard upholstery (A) using wood dowel (9), hex head bolt (2), spring washer (5), flat washer (6). Tighten all bolts securely with Wrench (11), but do not over tighten.
- Assemble right side rail (F) to right headboard post (B) and left side rail (G) to left headboard post (C) using threaded Step 3: bolt (1), curved washer (7), spring washer (5), nut (8). Tighten all nuts securely with Wrench (11), but do not over tighten.
- Step 4: Assemble long metal frame (H) to short metal frame (J) using hex head bolt (4), spring washer (5), flat washer (6), nut (8). Tighten all bolts securely with Wrench (11), but do not over tighten.
- Assemble long metal frame (H) to left and right side rail (F&G) using hex head bolt (3), spring washer (5), flat washer Step 5: (6). Tighten all nuts securely with Wrench (11), but do not over tighten.
- Step 6: Assemble Center rail leg (K) into Center rail (L).
- Insert the wood dowels (10) into the cross bar (D) as shown. Assemble the center rail (L) to the cross bar (D) using Step 7: threaded bolt (1), curved washer (7), spring washer (5), nut (8). Tighten all nuts securely with Wrench (11), but do not over tighten.
- Screw threaded bolt (1) into the threaded holes on the Footboard (E). Then insert the wood dowels (10) into the Step 8: holes on the back of Footboard (E).
- Assemble the Footboard (E) to the center rail (L), right side rail (F) and left side rail (G) using threaded bolt (1), Step 9: spring washer (5), curved washer (7), nut (8). Tighten all nuts securely with Wrench (11), but do not over tighten.
- Step 10: Assemble the short metal frame (J) to the footboard (E) using hex head bolt (3), spring washer (5), flat washer (6). Tighten all bolts securely with Wrench (11), but do not over tighten.
- Step 11: Screw the slat roll (M) on the left and right side rail (F,G) using screws (12) as shown. Adjust the height of center rail leg (K) by turning adjustable levelers located on the bottom of center rail leg (K), clockwise to lower and counterclockwise to raise.

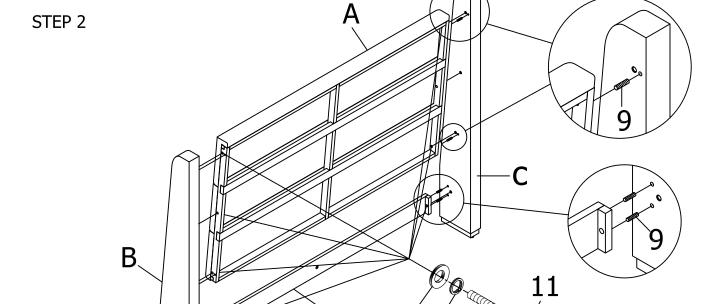


6

Page 2 of 7

ASSEMBLY INSTRUCTIONS

U225A310/U225A310F/U225A310R Morada Bed Queen U225A320/U225A320F/U225A310R Morada Bed King

STEP 3

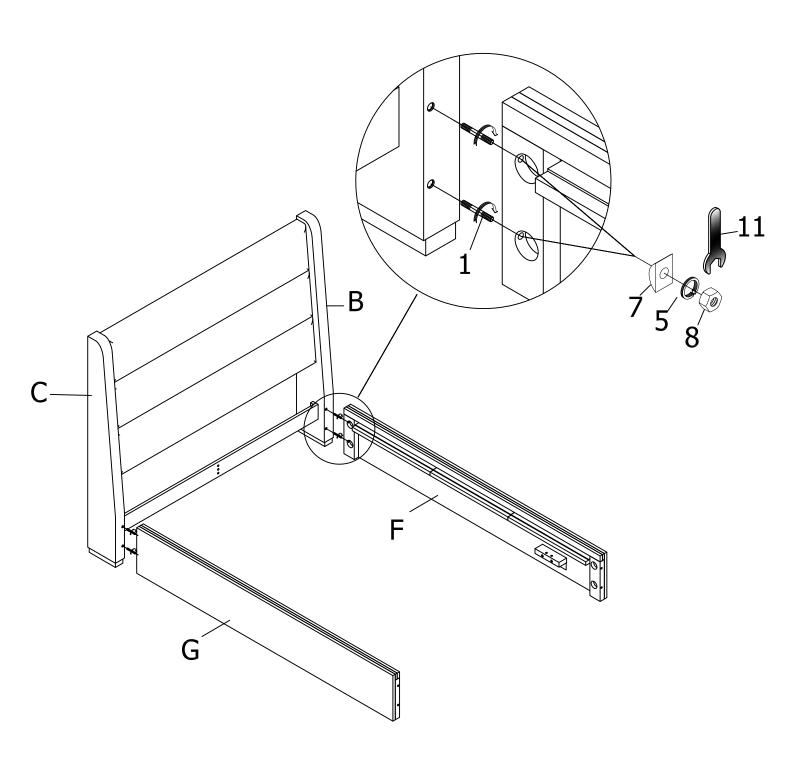


EXPLORE HOME UNIVERSAL

INSTRUCTION SHEET

ASSEMBLY INSTRUCTIONS


U225A310/U225A310F/U225A310R Morada Bed Queen U225A320/U225A320F/U225A310R Morada Bed King

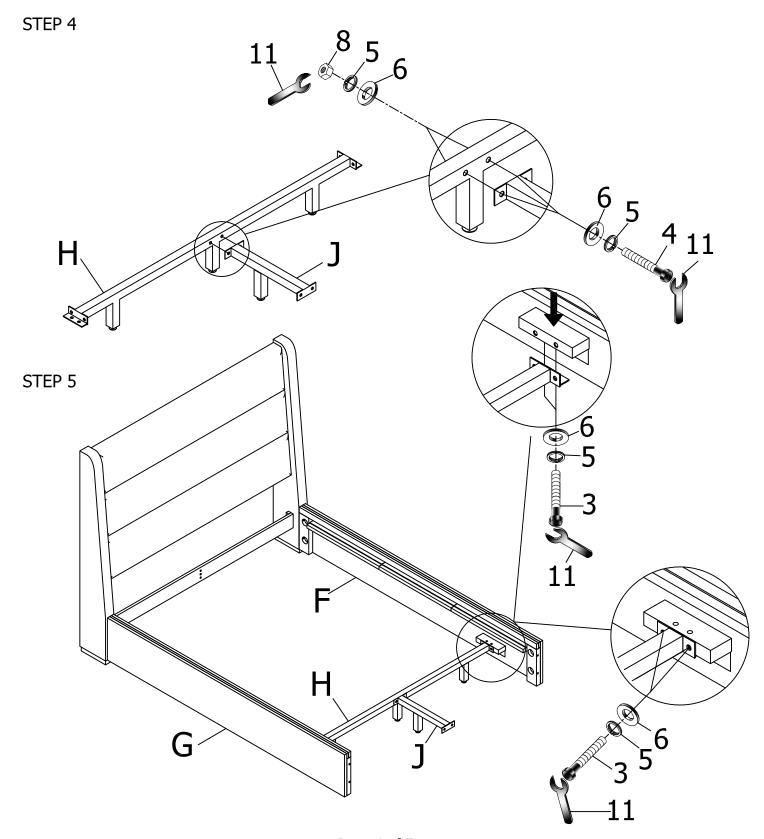

ASSEMBLY INSTRUCTIONS


U225A310/U225A310F/U225A310R Morada Bed Queen U225A320/U225A320F/U225A310R Morada Bed King

STEP 6

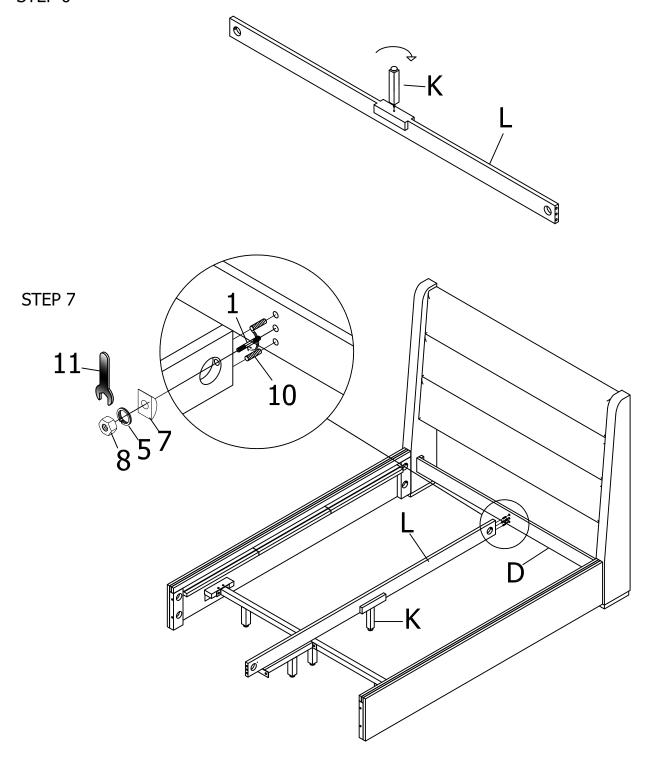

ASSEMBLY INSTRUCTIONS

U225A310/U225A310F/U225A310R Morada Bed Queen U225A320/U225A320F/U225A310R Morada Bed King

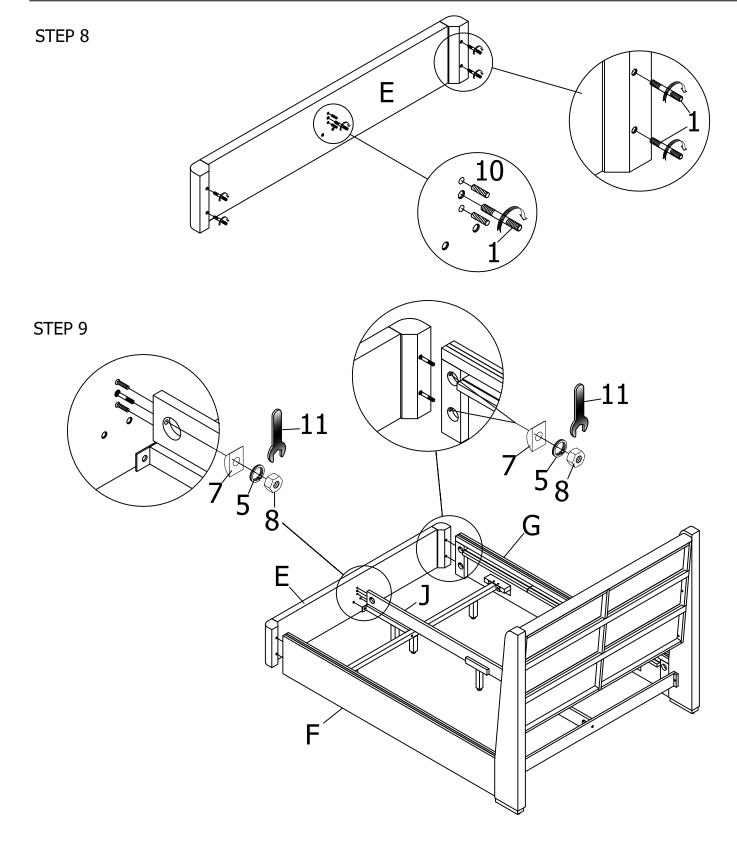


EXPLORE HOME UNIVERSAL

INSTRUCTION SHEET

ASSEMBLY INSTRUCTIONS

U225A310/U225A310F/U225A310R Morada Bed Queen U225A320/U225A320F/U225A310R Morada Bed King

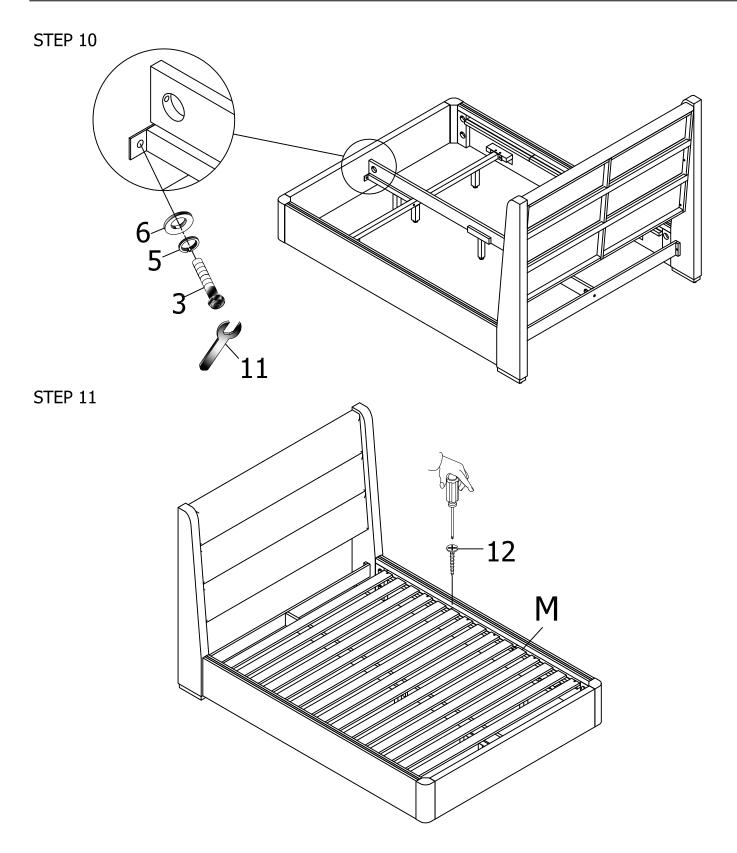

Page 7 of 7