

INSTRUCTION SHEET

U330210H/U330210FR
U330220H/U330220FR

Sainte-Ann Upholstered Bed Queen
Sainte-Ann Upholstered Bed King

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.








Caution: (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to ensure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on a damp cloth. The cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.

(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.









(3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and (or) screwdrivers to prevent injury and scratching or damaging flooring.

(4) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the above-mentioned components is attached to the furniture properly and kept tightened at all times.

PART LIST

A	Headboard		1PC
B	Side Rail		2PCS
C	Footboard		1PC
D	Slat Roll		1PC
E	Metal Slat		1PC
F	Metal Rail		1PC
G	Center Rail		1PC

HEAD BOARD & FOOT BOARD HARDWARE PACK

1	Bolt		5/16" *3"	4PCS
2	Curved washer		5/16"L32*13*8mm	4PCS
3	Bolt		5/16""1-1/2"	4PCS
4	Spring washer		5/16""13*2mm	8PCS
5	Flat washer		5/16""23*2mm	4PCS
6	Nut		5/16"	4PCS
7	Screw		8*1-1/4"mm	10PCS
8	Wrench		10*12mm	1PCS

METAL SLAT & METAL RAIL HARDWARE PACK

9	Nut		5/16"	2PCS
10	Flat washer		5/16""23*2mm	16PCS
11	Spring washer		5/16""13*2mm	14PCS
12	Bolt		5/16""2-3/4"	2PCS
13	Bolt		5/16""1"	12PCS
14	Wrench		10*12mm	1PCS

INSTRUCTION SHEET

U330210H/U330210FR

Sainte-Ann Upholstered Bed Queen

U330220H/U330220FR

Sainte-Ann Upholstered Bed King

Assembly Procedure: (Please follow the sketches below.)

Note: Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware.
Make sure the quantity of each is correct.

Put all parts on a soft and smooth surface to avoid damage or being scratched.

Step 1: Attach the Metal Rail (F) and Center Rail (G) to the Metal Slat (E) with Nuts (9), Flat washers (10), Spring Washer (11) and Bolts (12) using Wrench (14).

Step 2: Assemble Center Rail (G) with Headboard (A) using Flat washer (10), Spring Washer (11) and Bolt (13). Tighten them by Wrench (14).

Step 3: Assemble Side Rails (B) with Headboard (A) using Bolts (1), Curved washers (2), Spring Washers (4) and Nuts (6). Tighten them by Wrench (8).


Step 4: Assemble the Metal slat (E) to Side Rail (B) with Flat washer (10), Spring Washer (11), Bolt (13) using Wrench (14).

Step 5: Assemble Side Rails (B) to Footboard (C) with Flat washers (5), Spring Washer (4), and Bolt (3), using Wrench (8).


Step 6: Assemble the Metal Rail (F) to Footboard (C) with Flat washer (10), Spring Washer (11) and Bolt (13). Tighten them by Wrench (14).

Step 7: Assemble the Slat Roll (D) to Side Rails (B) with Screw (7) by Screw driver (not provide).

STEP 1

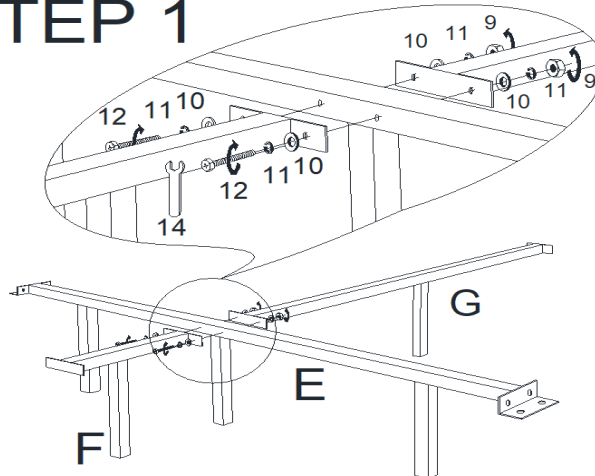

STEP 2

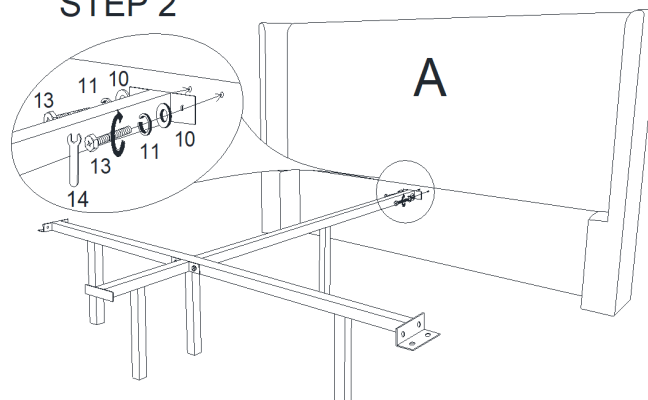

INSTRUCTION SHEET


U330210H/U330210FR

Sainte-Ann Upholstered Bed Queen


U330220H/U330220FR

Sainte-Ann Upholstered Bed King

STEP 3

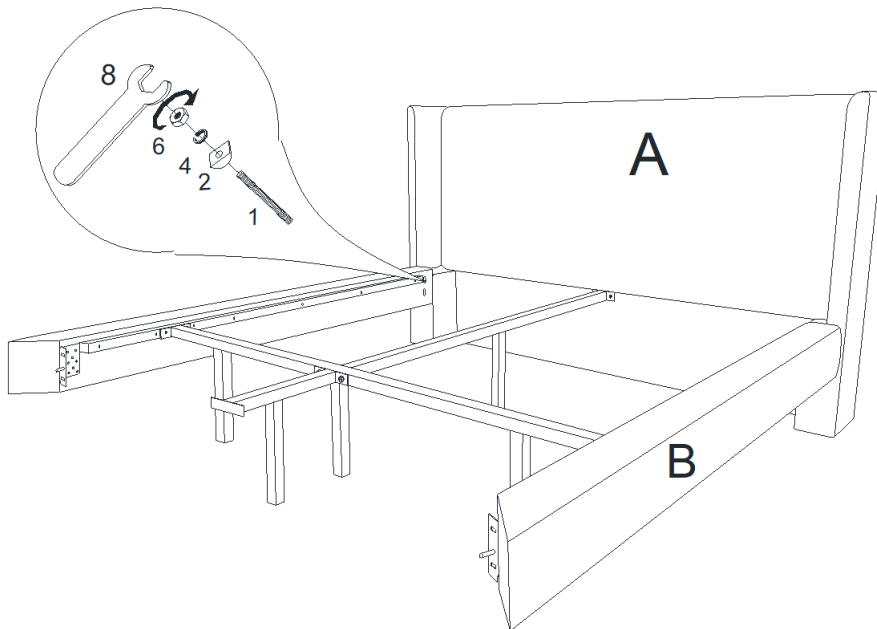

STEP 4

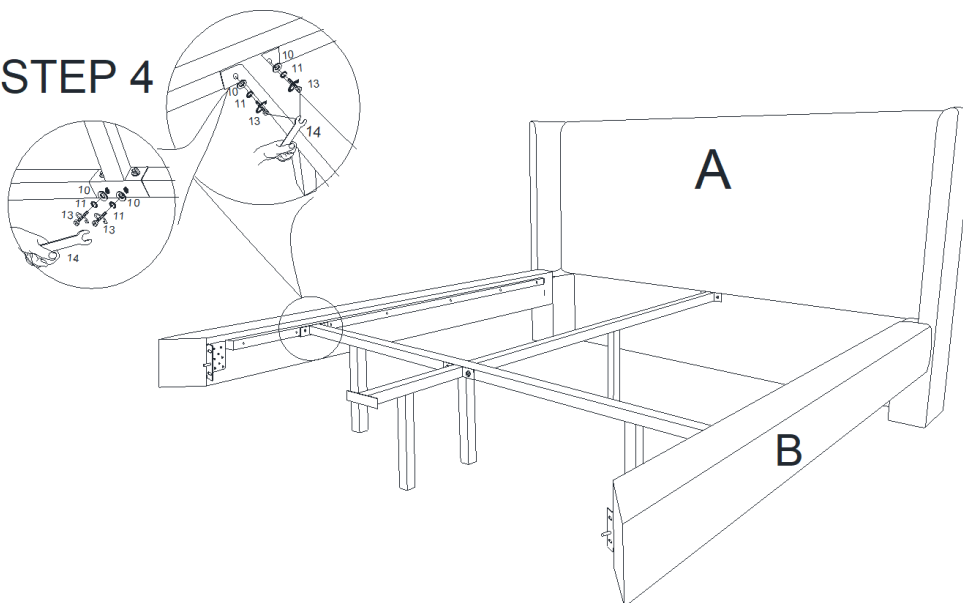

INSTRUCTION SHEET


U330210H/U330210FR

Sainte-Ann Upholstered Bed Queen

U330220H/U330220FR

Sainte-Ann Upholstered Bed King

STEP 6

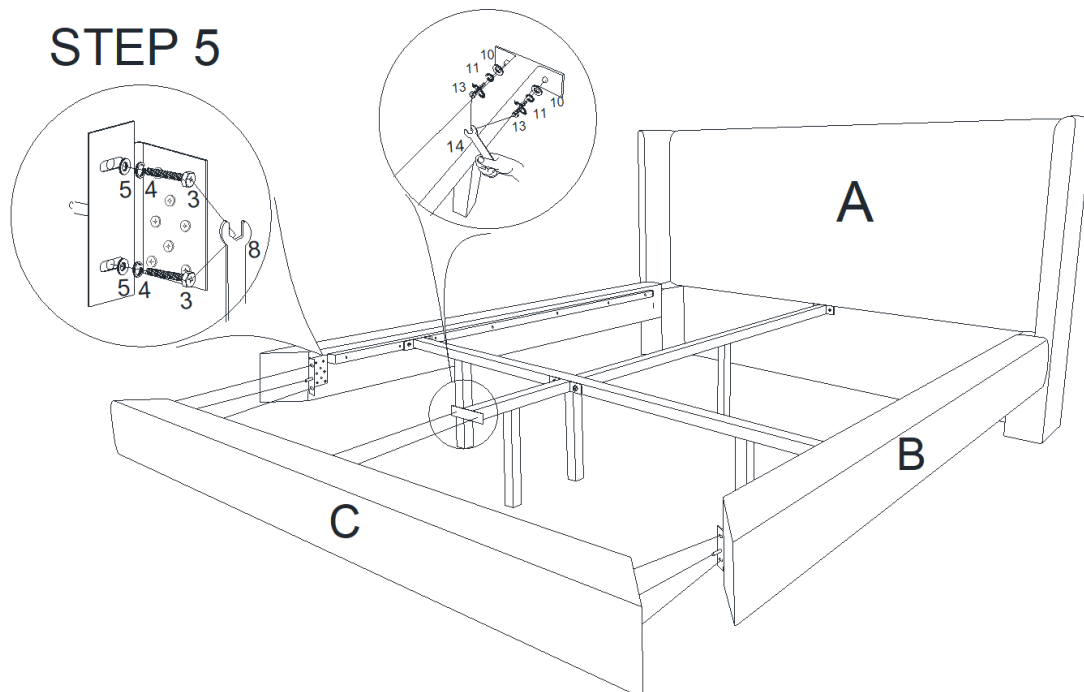

STEP 7

