




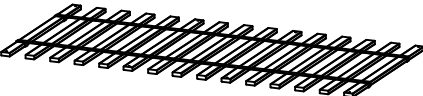


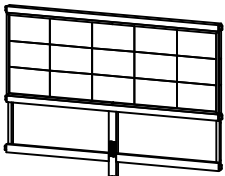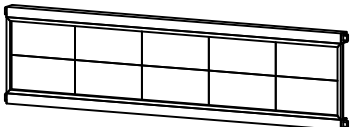
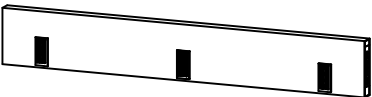



ASSEMBLY INSTRUCTIONS

U330280/290 CHATAM POSTER BED

PARTS LIST

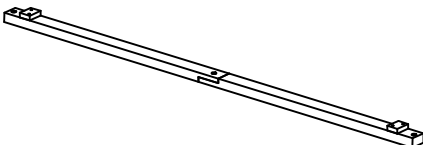


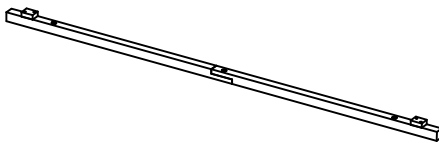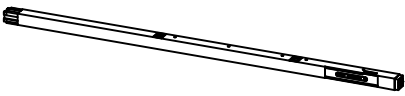


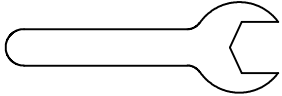

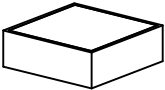
CODE	PARTS	DESCRIPTION	QTY
1		HEADBOARD	1
2		FOOTBOARD	1
3		SIDERAIL	2
4		MIDDLE SUPPORT	1
5		MIDDLE LEG	1
6		CROSS BAR	2


PARTS LIST

CODE	PARTS	DESCRIPTION	QTY
7		SIDE BAR	2
8		CANOPY POLE HEADBOARD	2
9		CANOPY POLE FOOTBOARD	2
10		CANOPY BAR HEADBOARD & FOOTBOARD	2
11		CANOPY BAR SIDERAIL	2

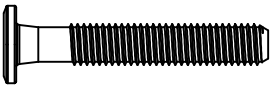
- PLEASE DO NOT DISCARD ANY OF THE PACKAGING UNTIL YOU HAVE CHECKED ALL THE PARTS AND HARDWARE HAVE BEEN SUPPLIED.
- BEFORE YOU BEGIN ASSEMBLY, DECIDE ON THE HEIGHT YOU WOULD LIKE TO SET THE CROSS BARS AS THEY CAN BE ADJUSTED TO DESIRED DISTANCE FROM FLOOR (10 $\frac{1}{4}$ "-13 $\frac{1}{4}$ ").
- FOLLOW INSTRUCTIONS CLOSELY AS DEVIATION FROM THEM MAY VOID YOUR WARRANTY AND PRESENT A POSSIBLE SAFETY RISK.
- IT IS RECOMMENDED THAT ASSEMBLY IS DONE ON A SOFT SURFACE LIKE CARPET TO AVOID ANY DAMAGE.
- THOUGH NOT NECESSARY, IT IS ADVISED THAT ASSEMBLY BE COMPLETED BY A TEAM OF AT LEAST THREE PEOPLE.

HARDWARE LIST





CODE	HARDWARE	DESCRIPTION	QTY
A		JCBC BOLT M6 X 60MM	23
B		FLAT WASHER M6 x Ø18MM SS	31
C		SPRING WASHER M6 x Ø11MM SS	31
D		BRACKET	8
E		NUT M6	8
F		HEX KEY L4	1
G		WRENCH 10	1
H		FAB SCREW Ø6 X 1.5"	24
I		CUP STAINLESS STEEL	4

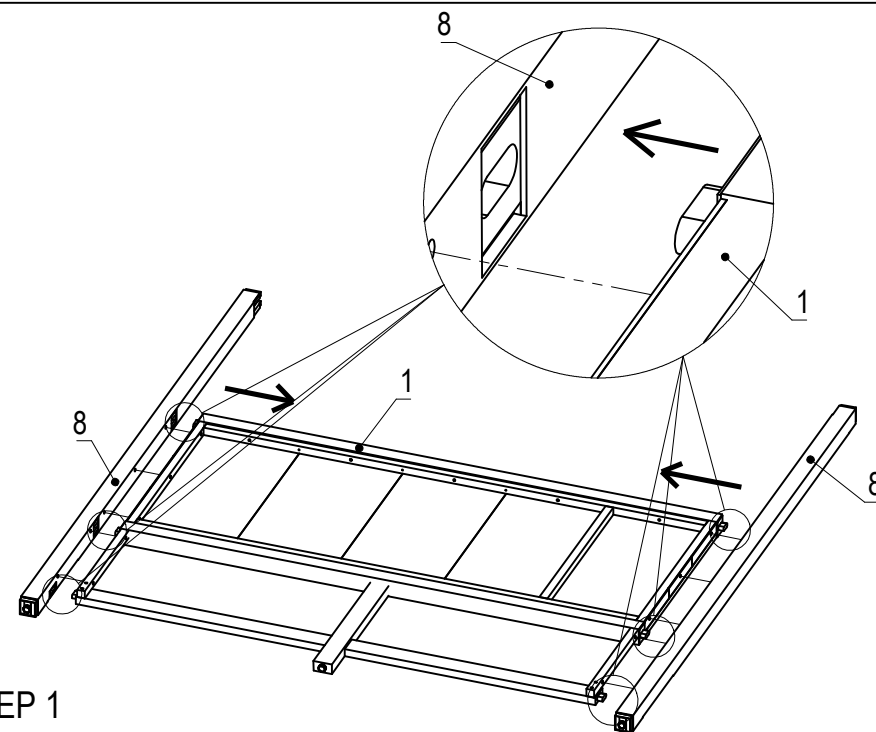


STEP 1

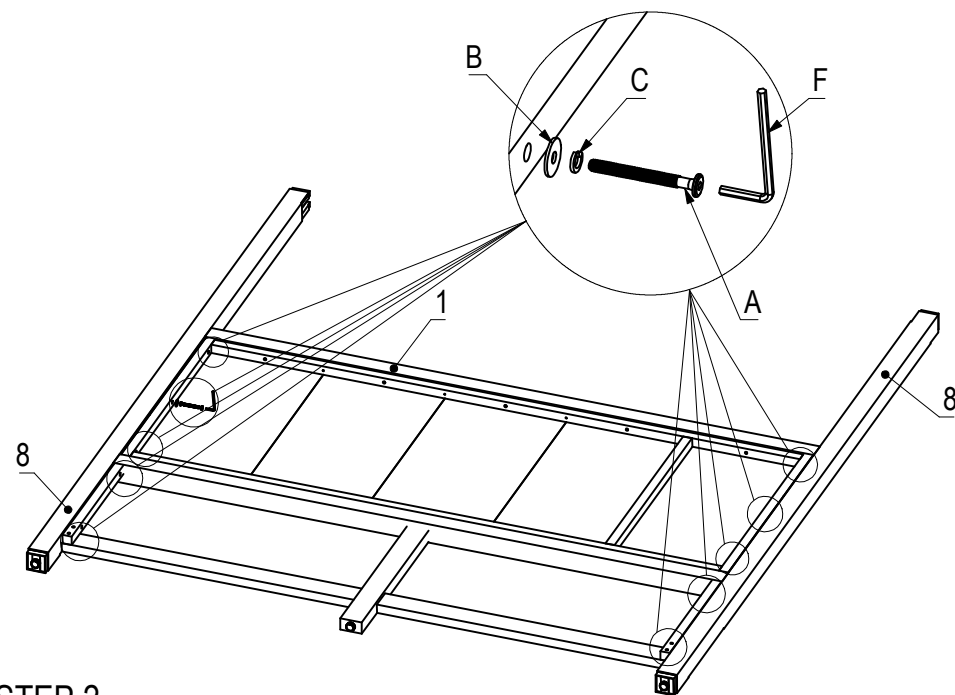


STEP 2

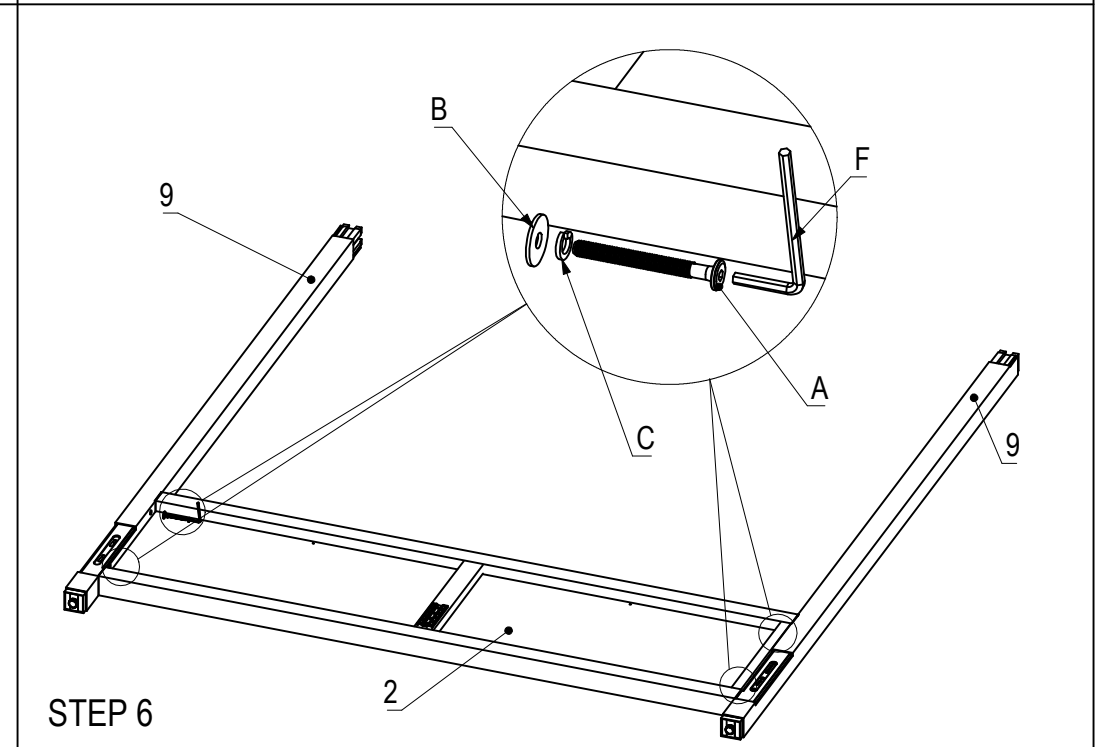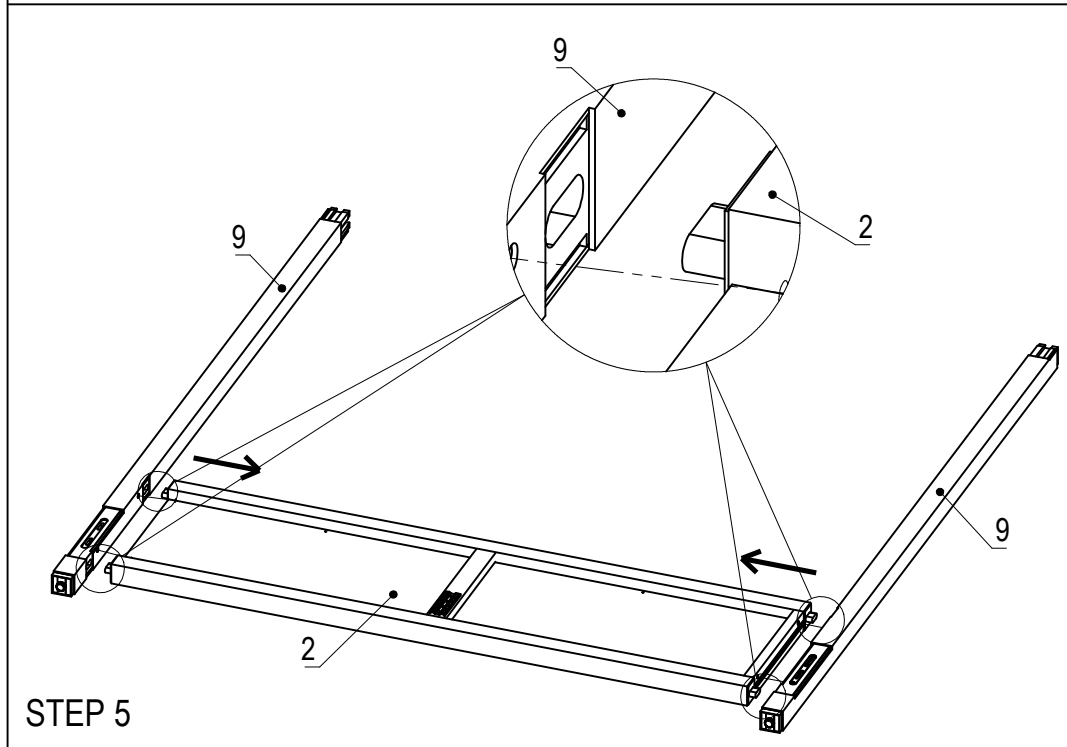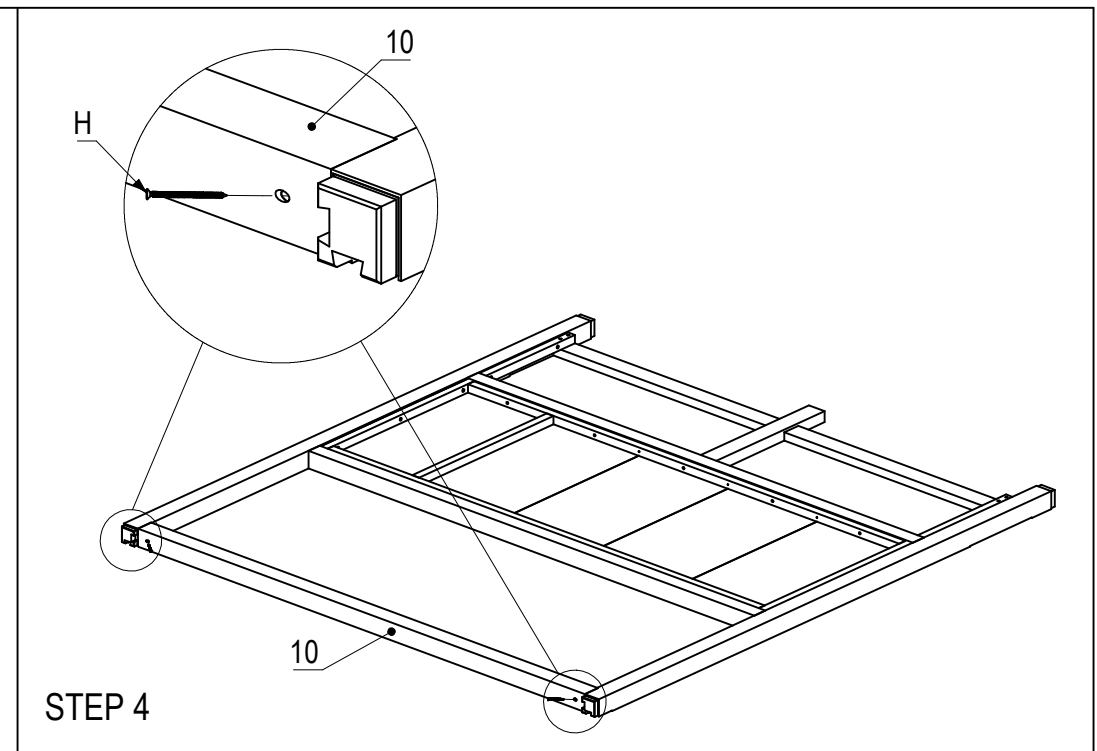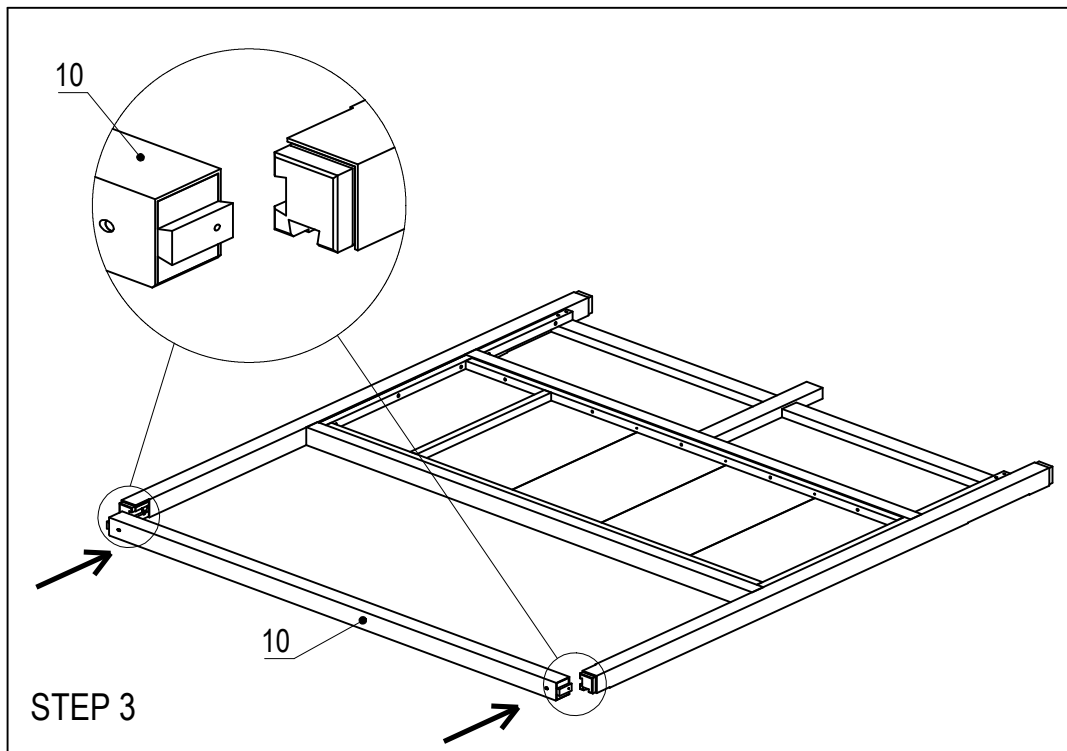


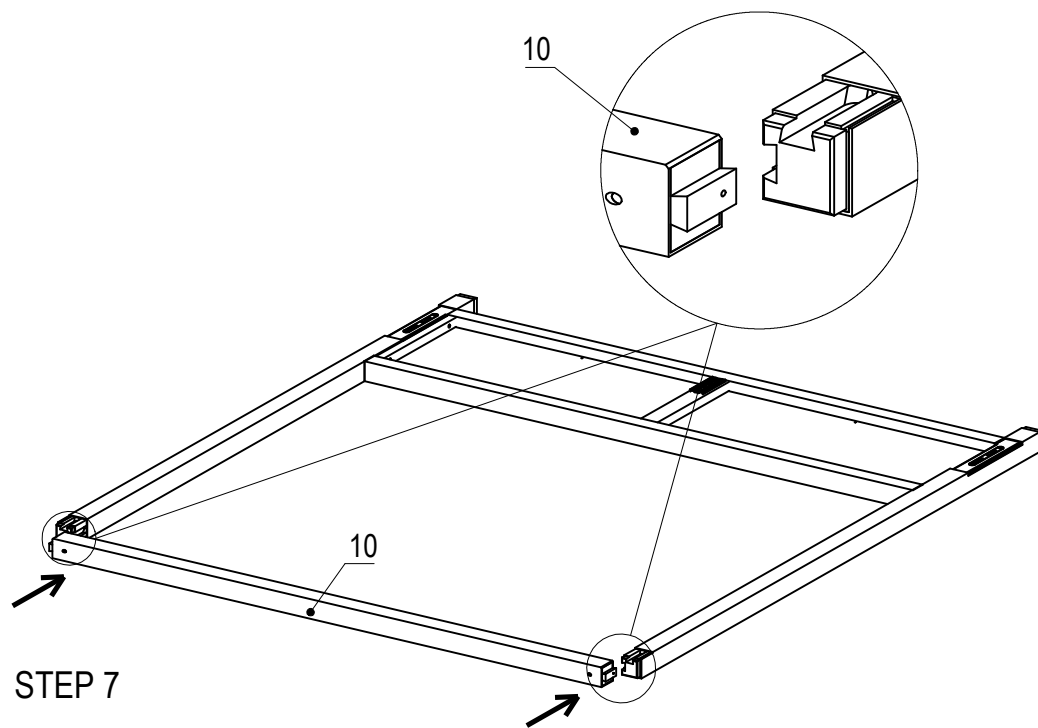


STEP 7

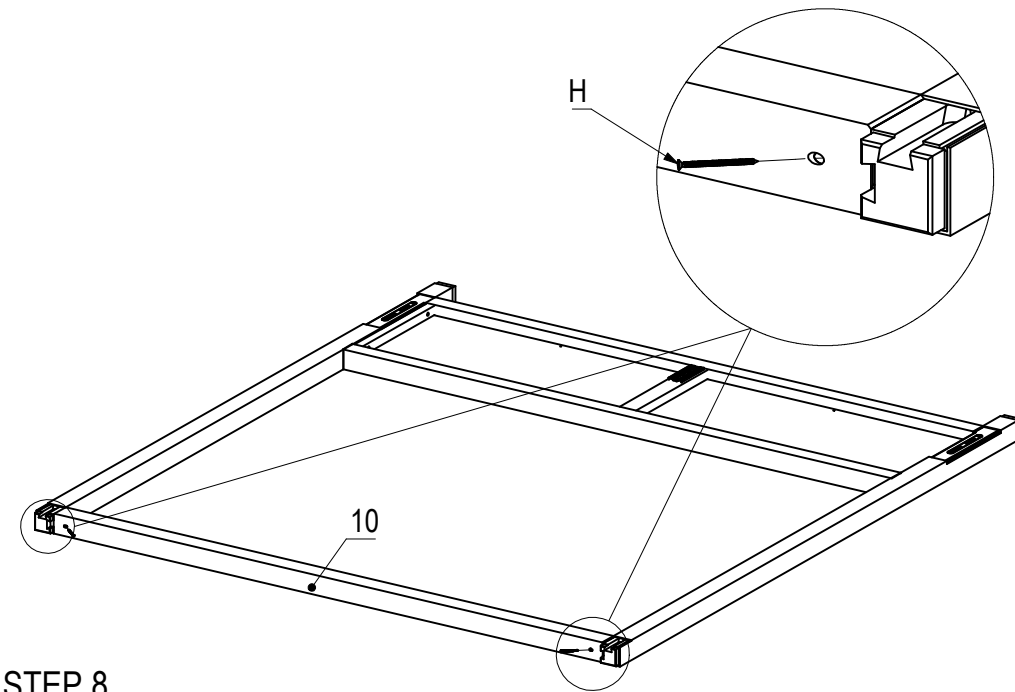


STEP 8

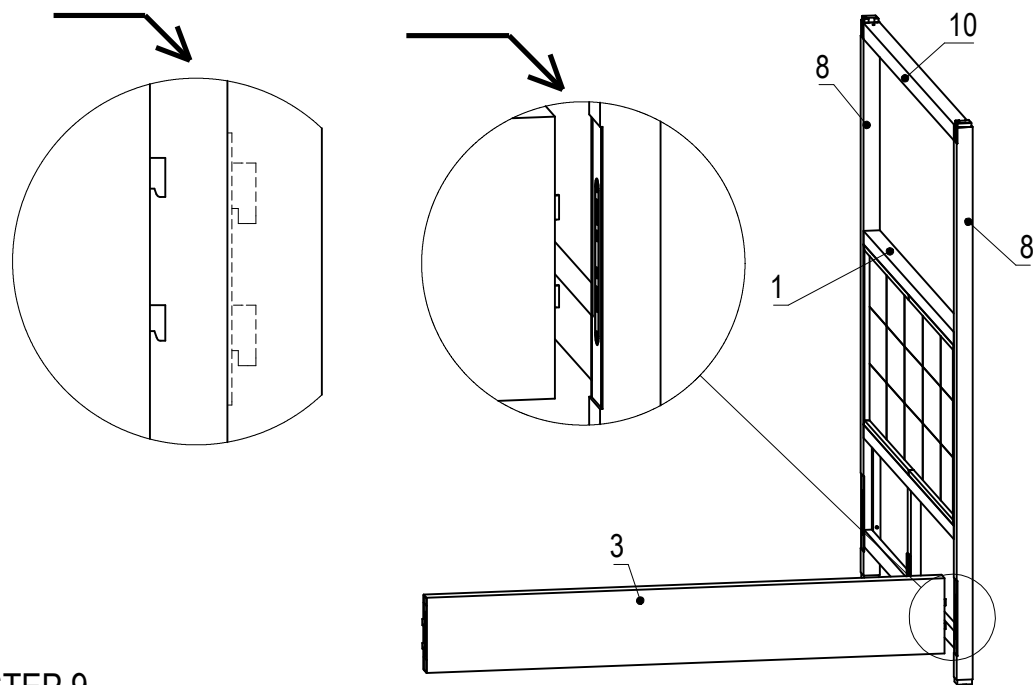


STEP 9

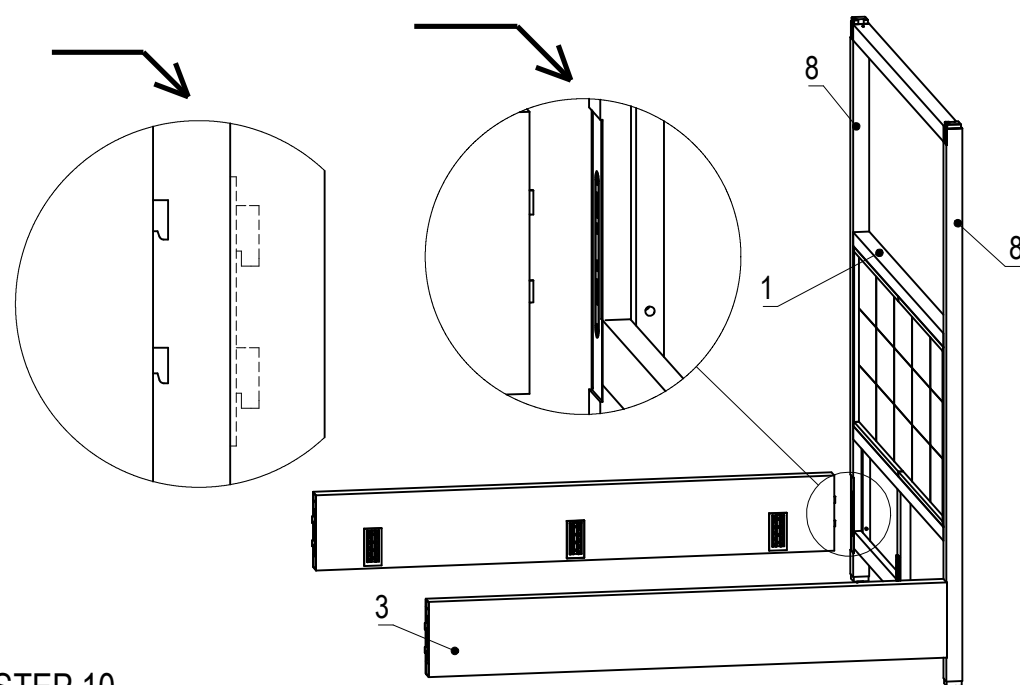


STEP 10

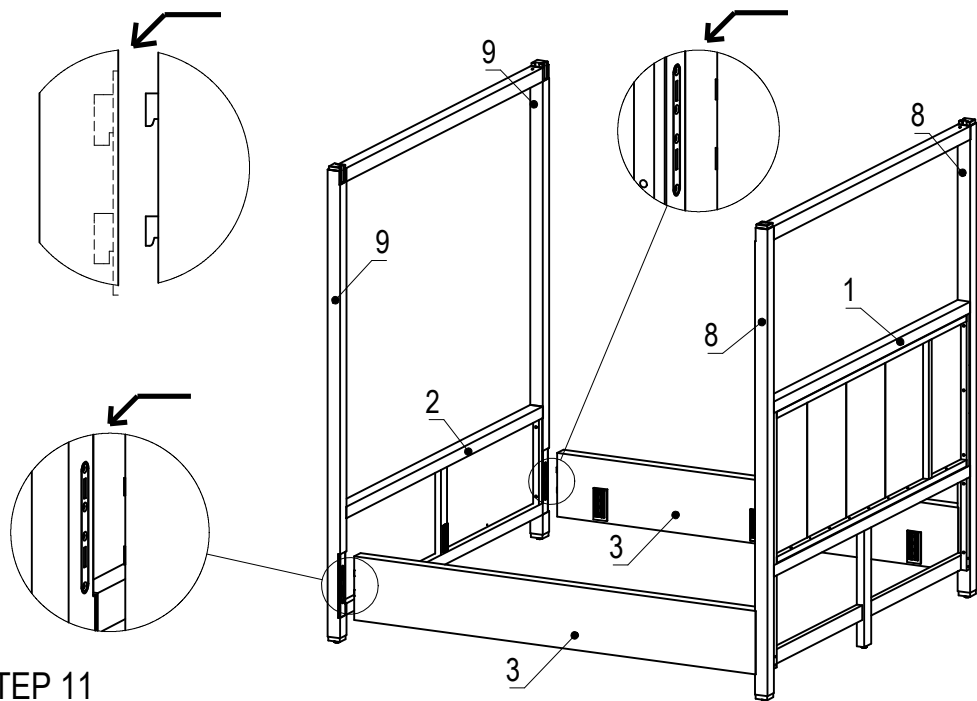


STEP 11

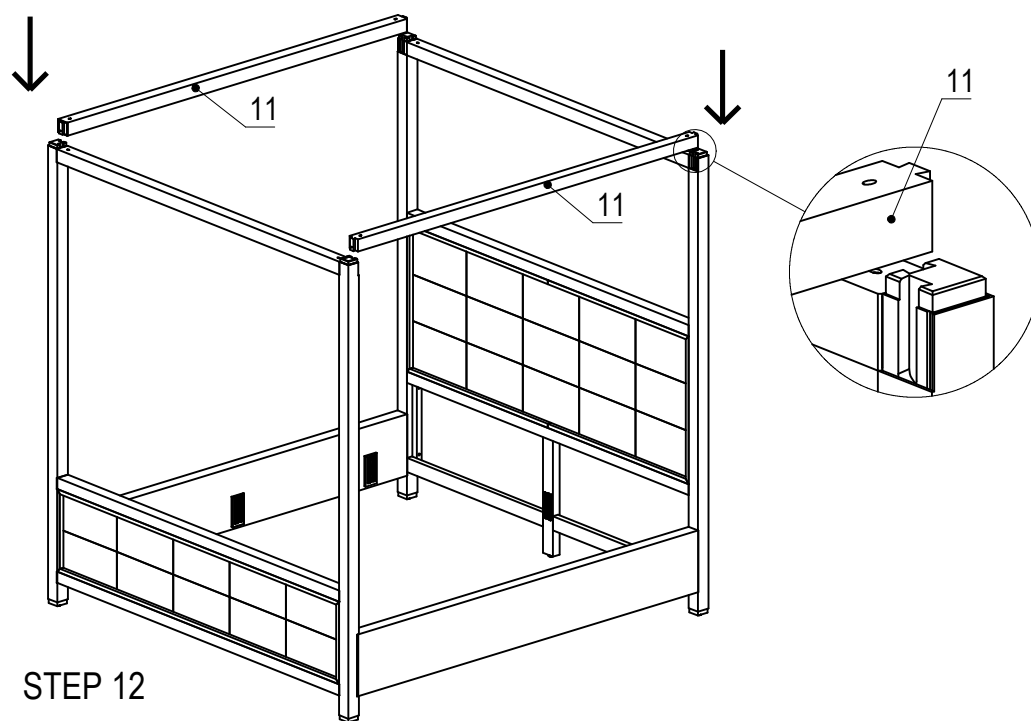

STEP 12




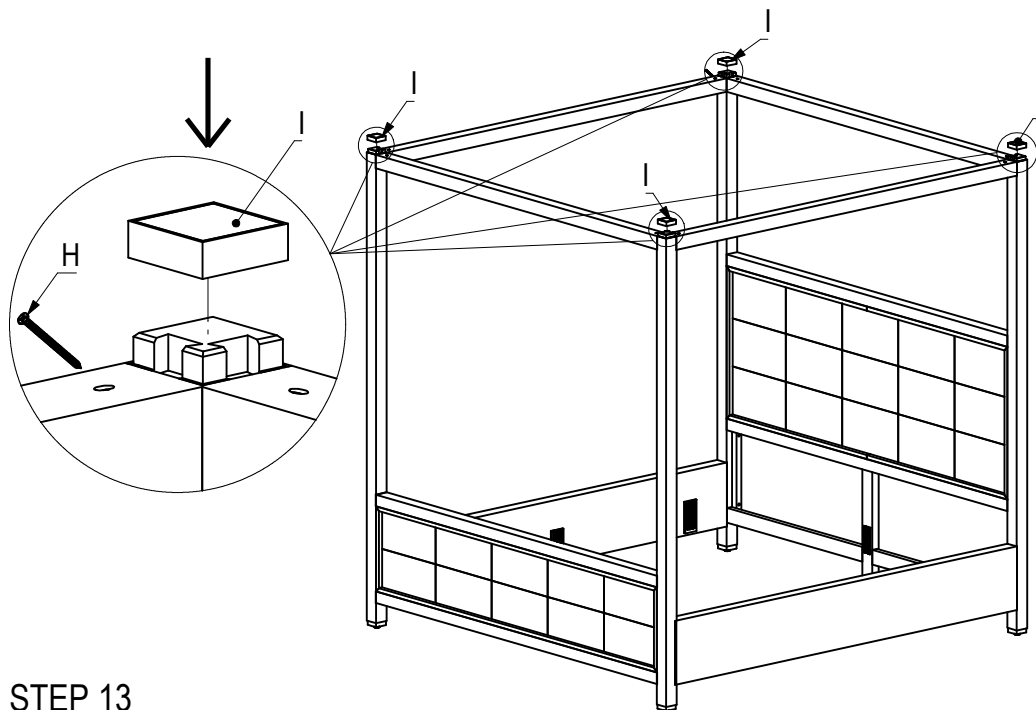



STEP 13

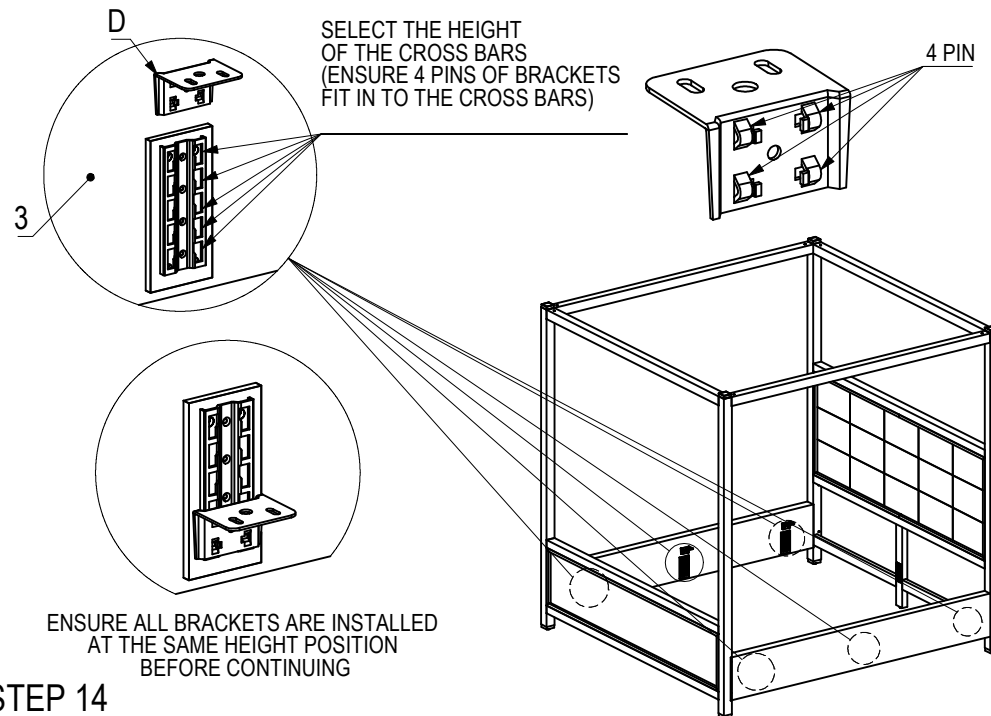


STEP 14

Available Height Options (4 Positions)

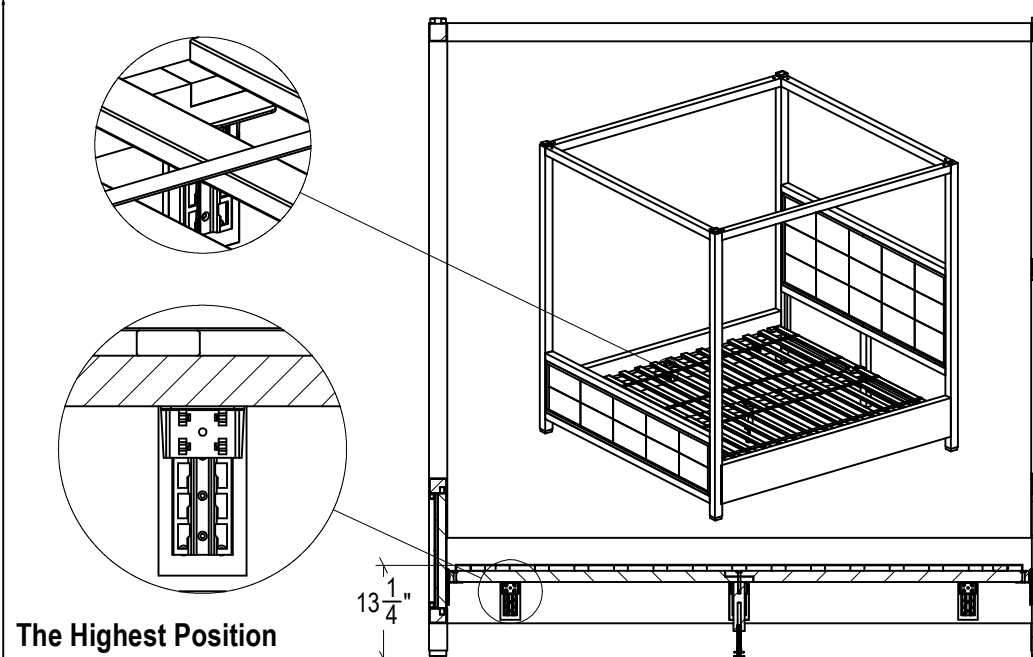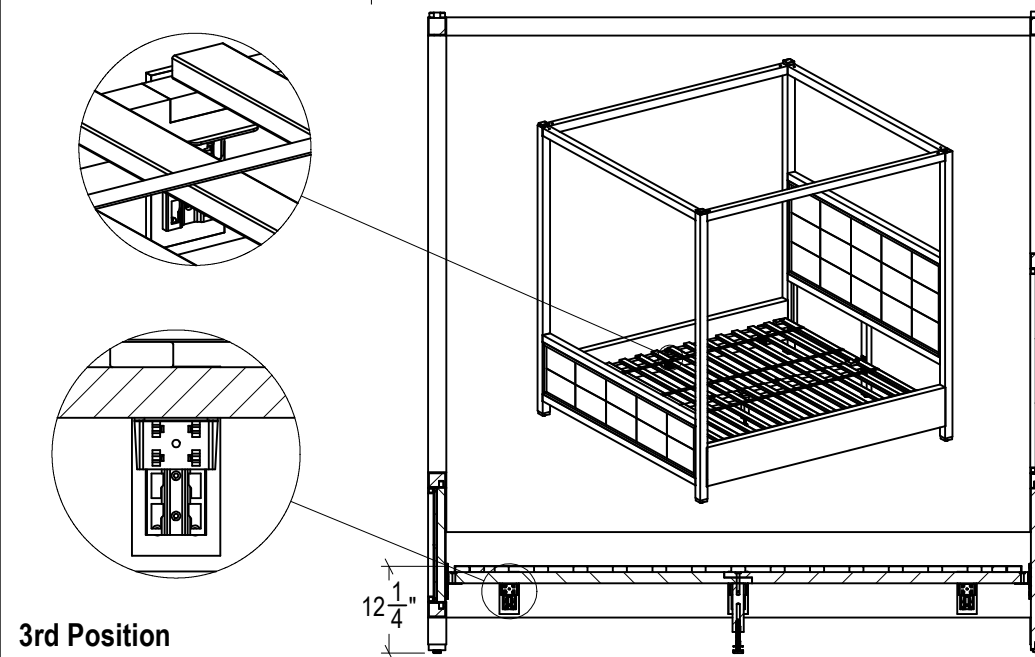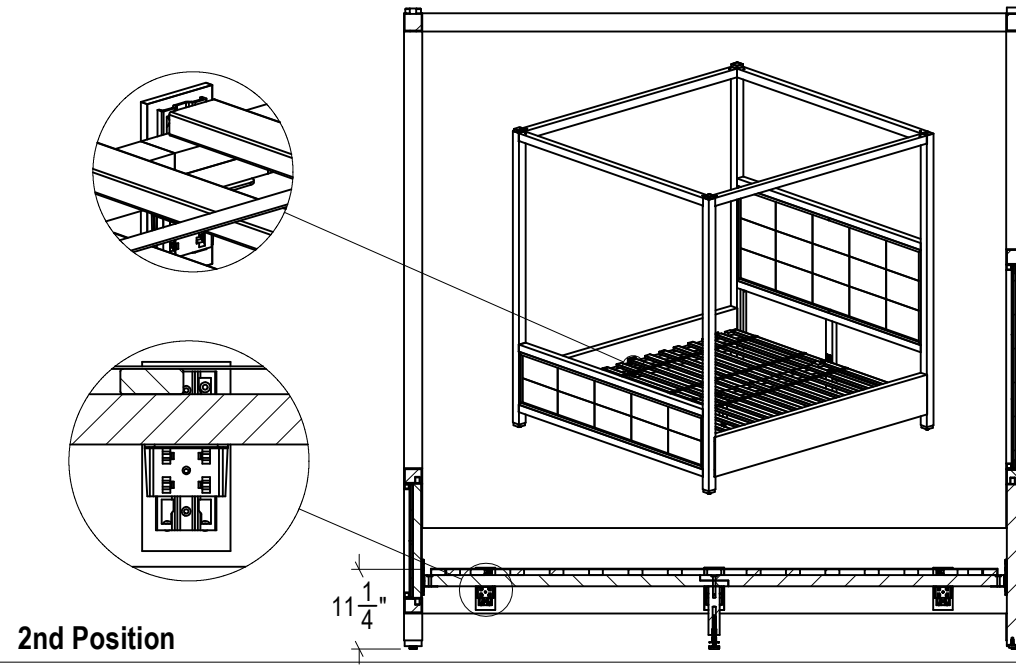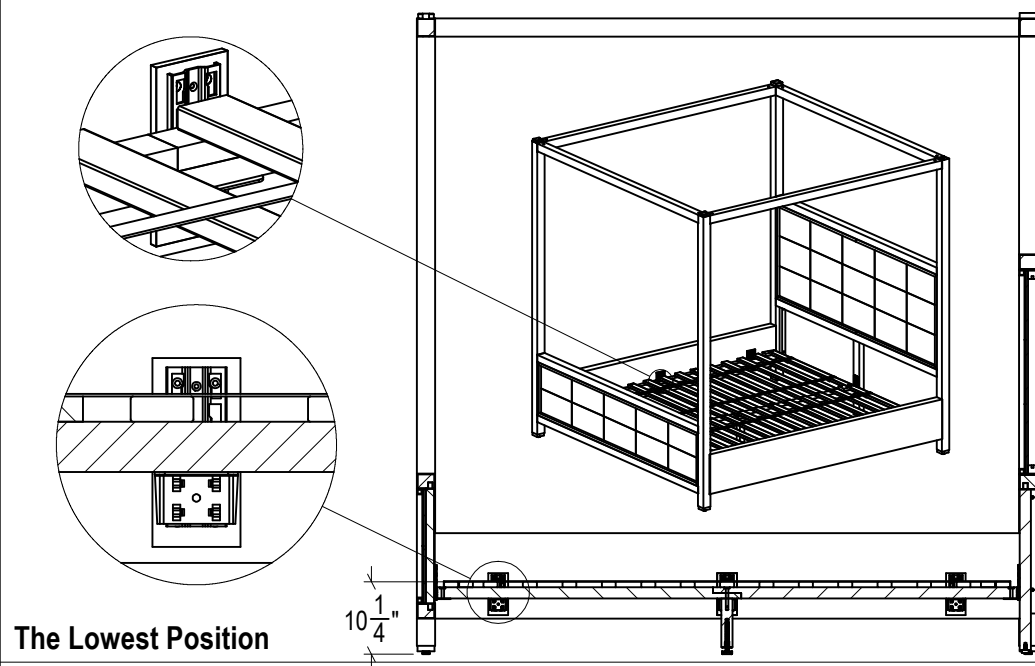


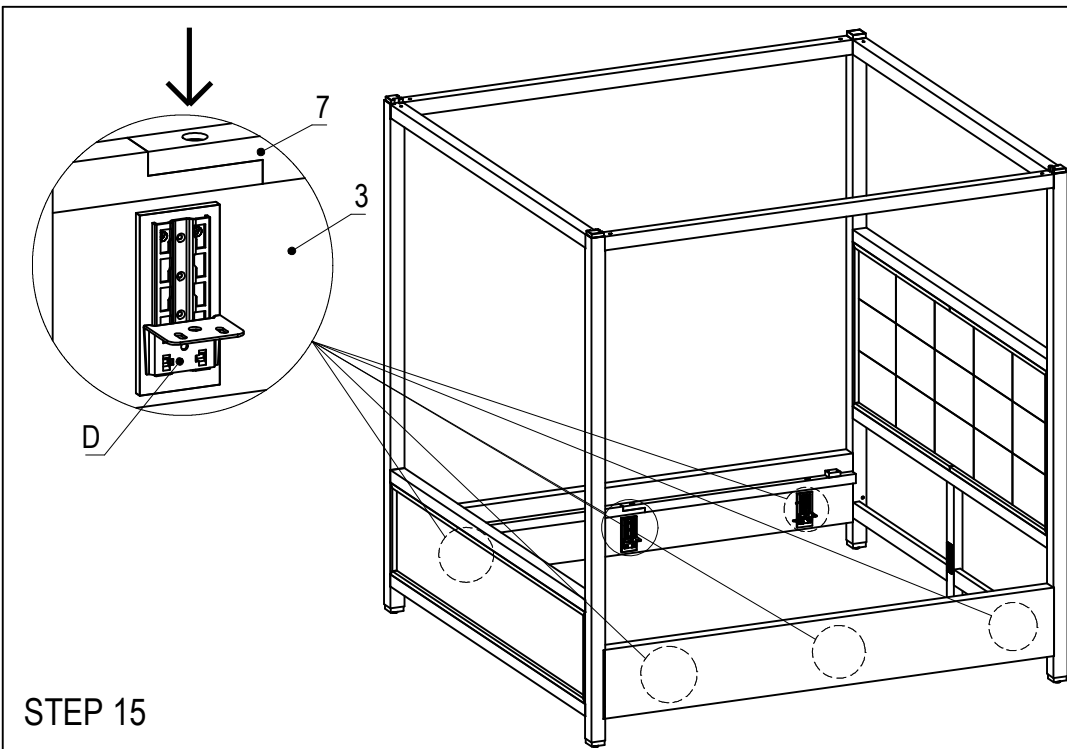


STEP 15

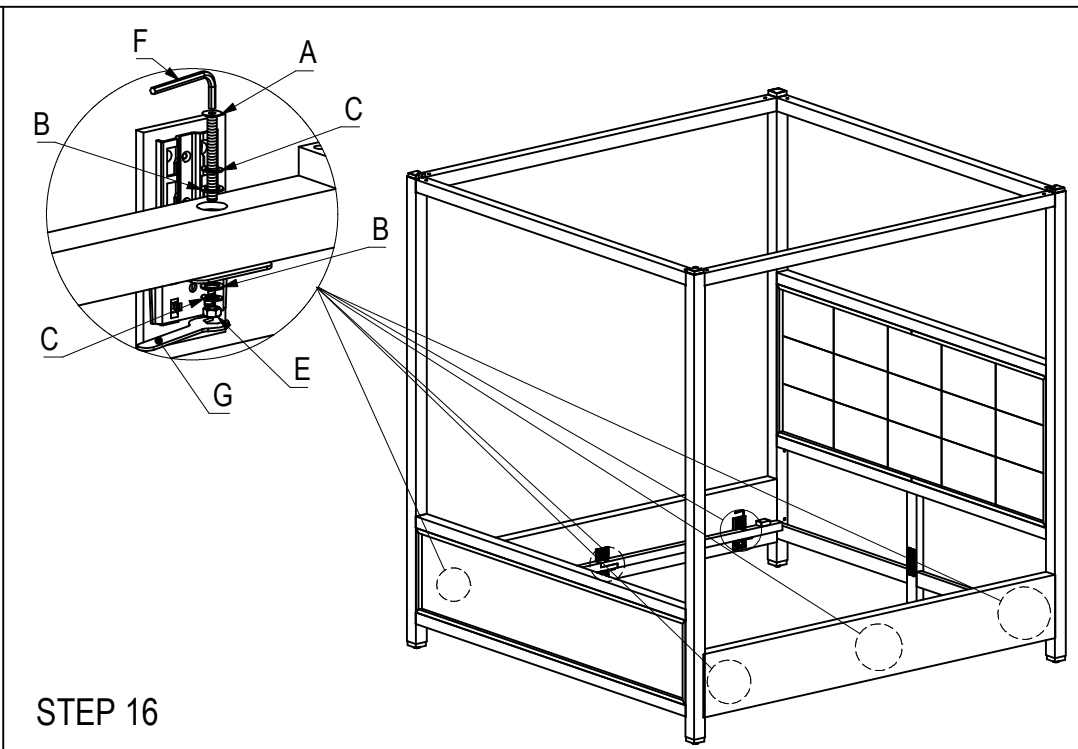


STEP 16

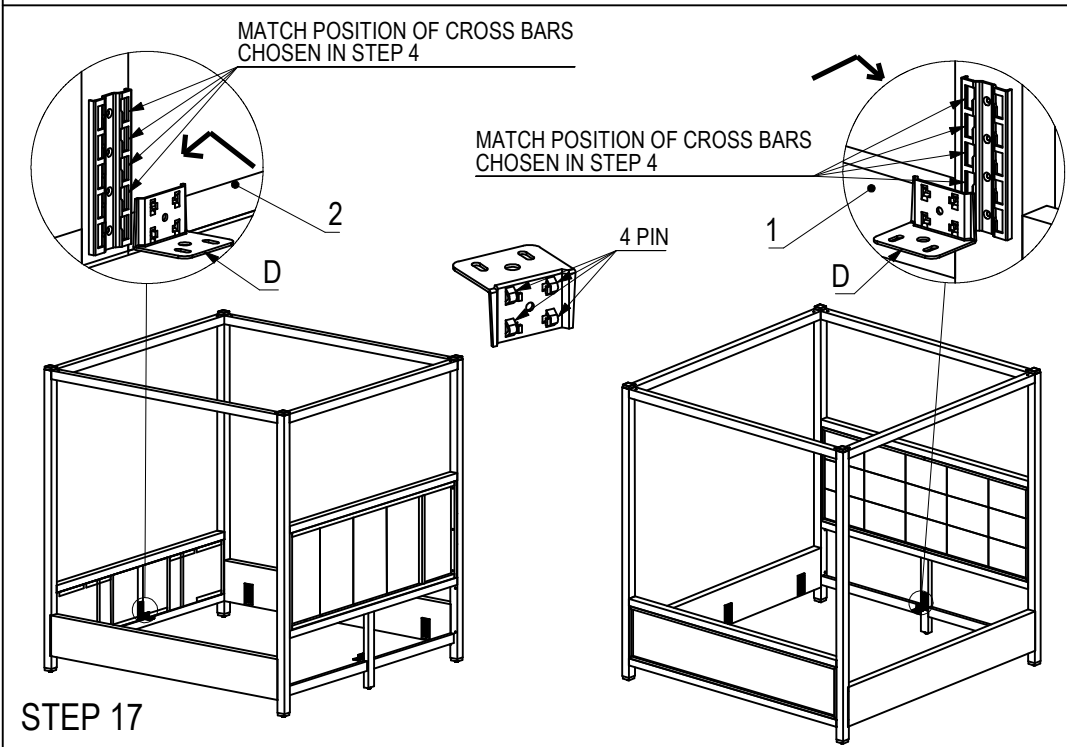


STEP 17

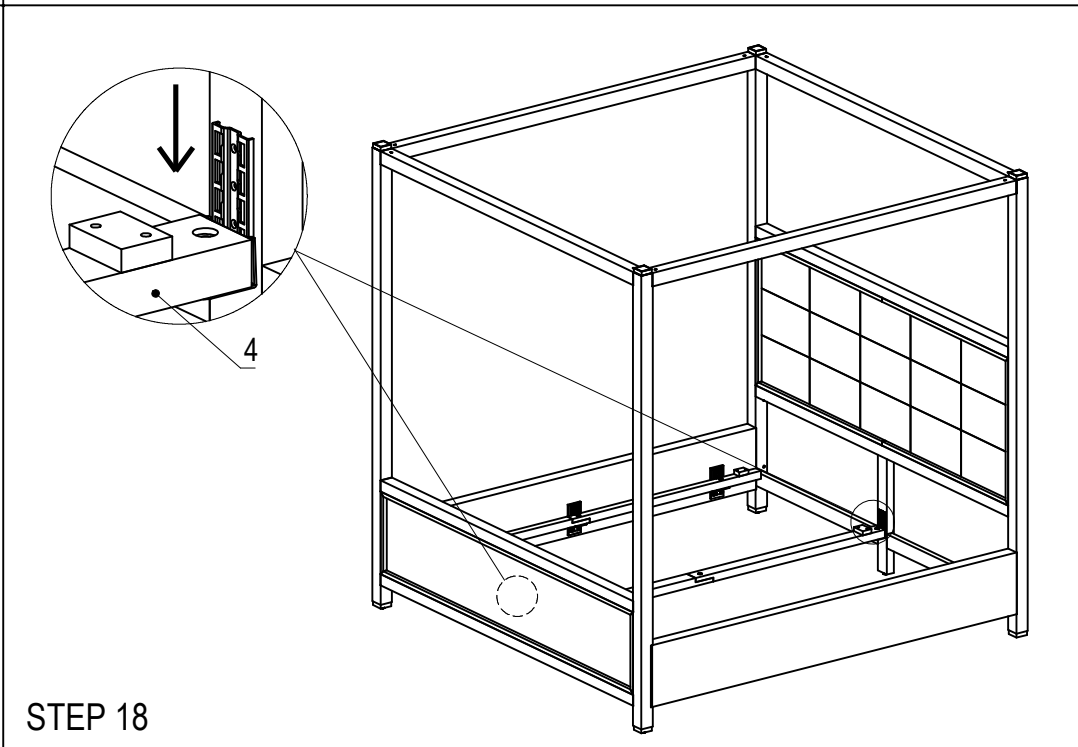


STEP 18

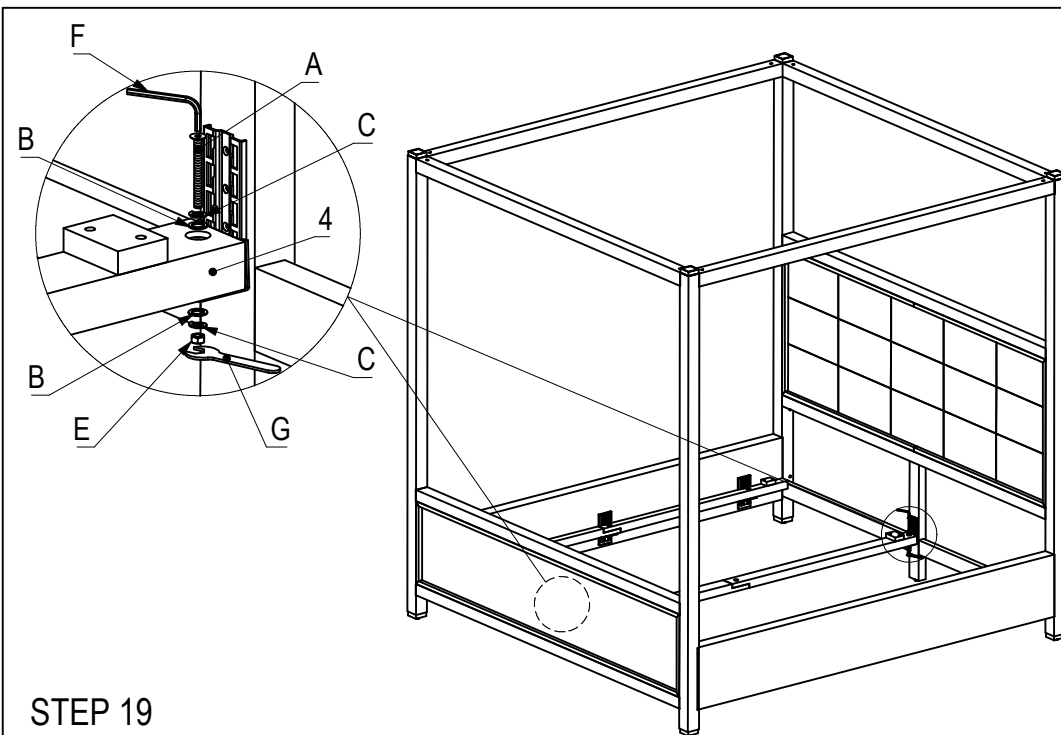


STEP 19

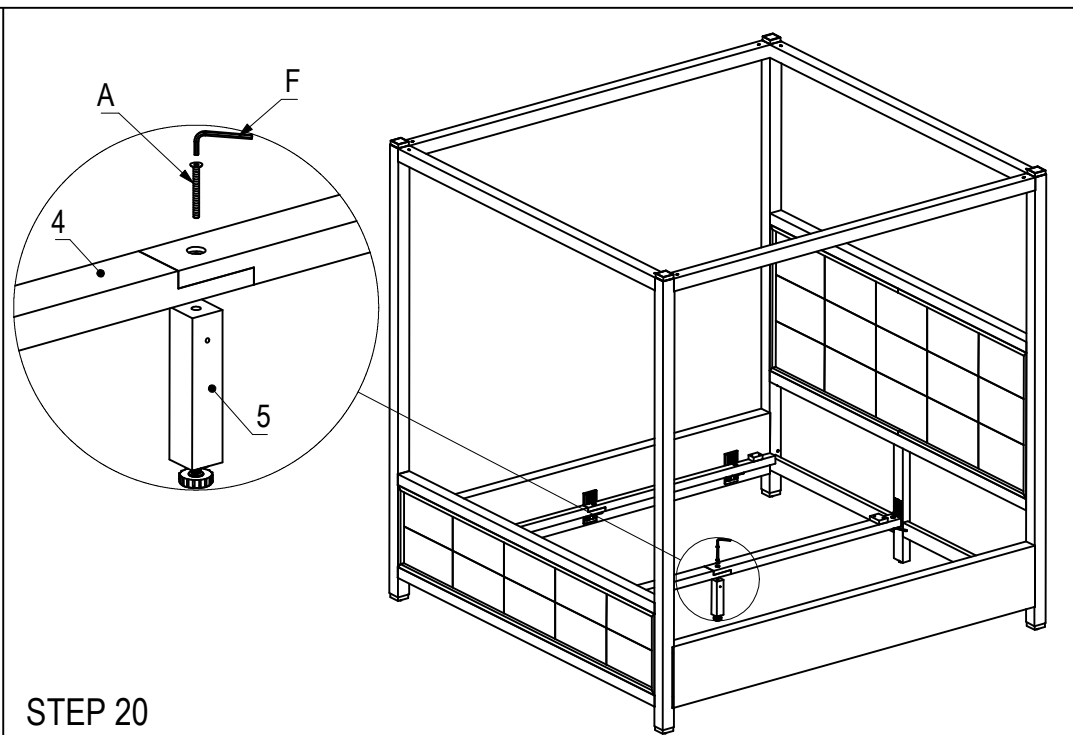

STEP 20

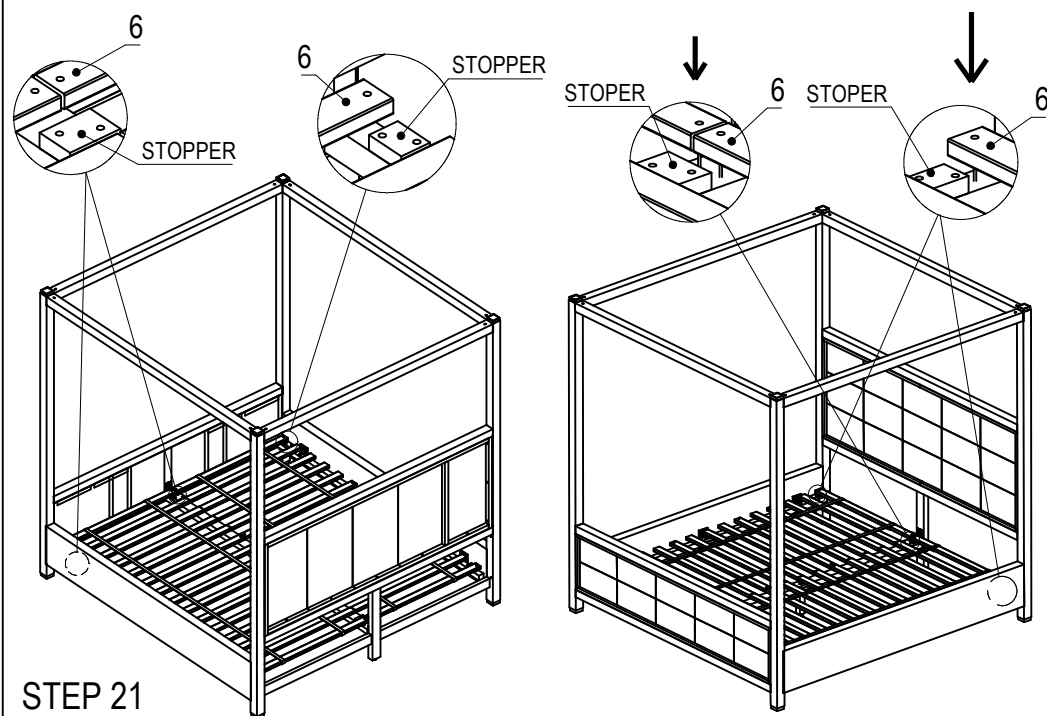



STEP 21

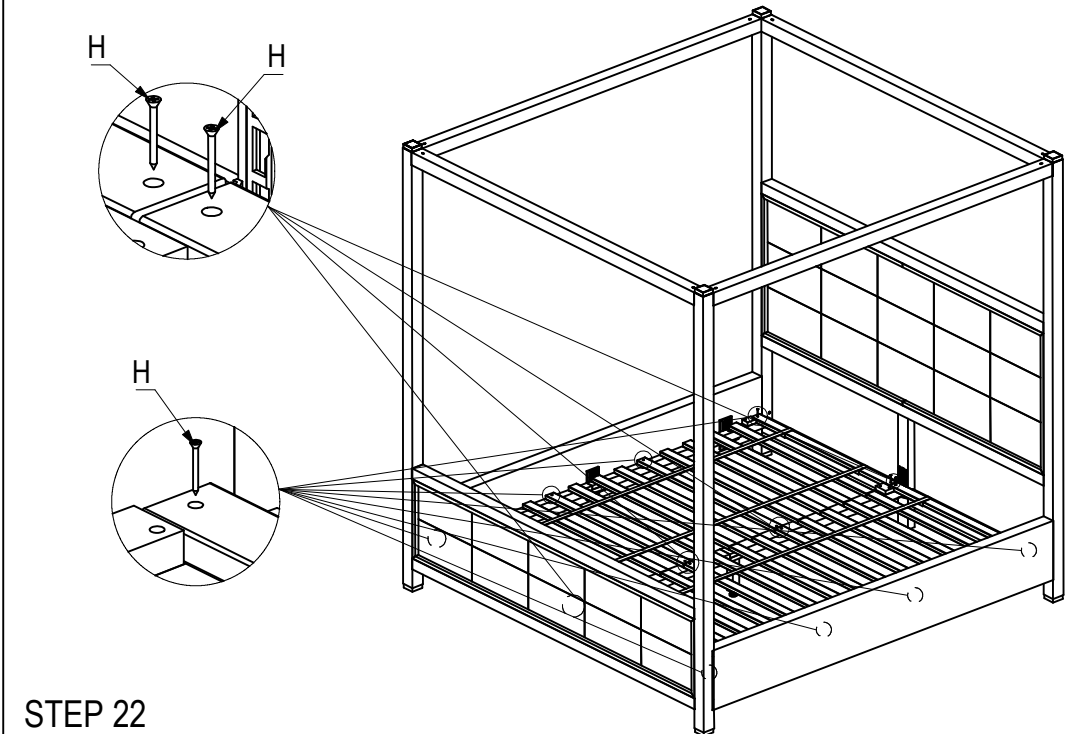

STEP 22

FOLLOW STEP 17 - 14
BACKWARDS TO RESET
BRACKET POSITION THEN REPEAT
STEP 14 - 17

HEIGHT OF CROSS BARS
CAN BE ADJUSTED AFTER
ASSEMBLY

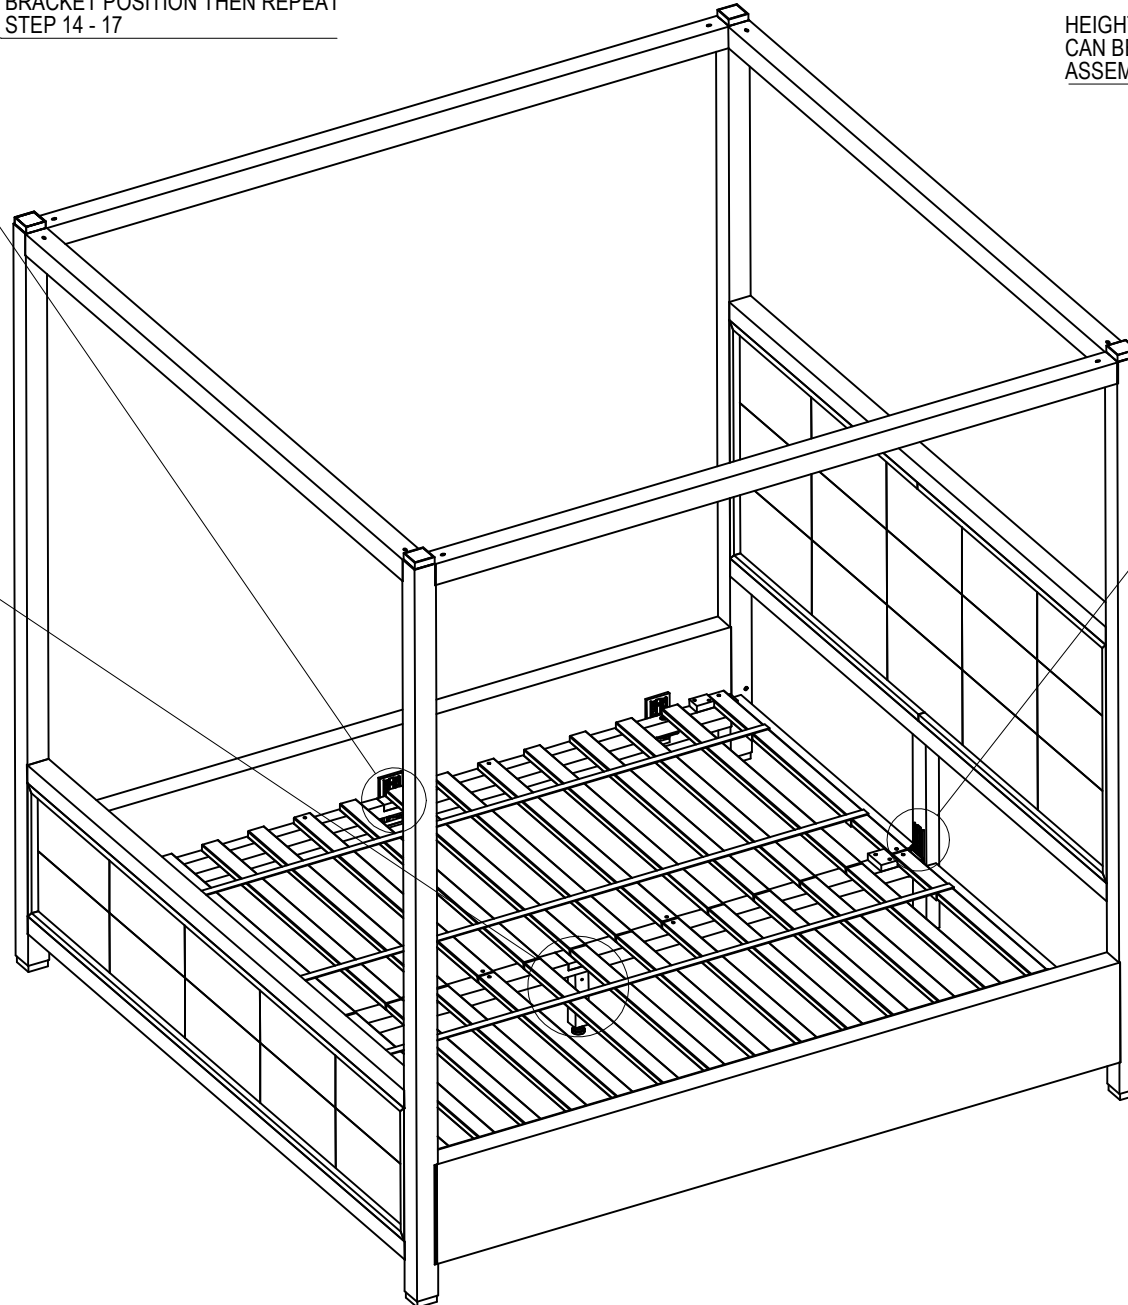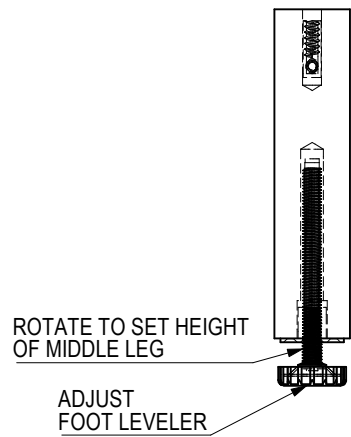

FINISH