

INSTRUCTION SHEET**ASSEMBLY INSTRUCTIONS**

U462210H	Boulder Upholstered Bed Headboard Queen
U462A210H	River Rock Upholstered Bed Headboard Queen
U462220H	Boulder Upholstered Bed Headboard King
U462A220H	River Rock Upholstered Bed Headboard King

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipping.





Caution: (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on a damp cloth. The cloth should not be excessively wet. Polish finish with a soft cloth and an industry recognized furniture polish.

(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.





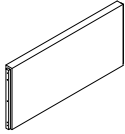

(3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and (or) screwdrivers to prevent injury and scratching or damaging flooring.

(4) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the above mentioned components is attached to the furniture properly and kept tightened at all times.

Parts List:

Description	Sketch	QTY
Upholstered Headboard (A)		1 pc
Left post (B)		1 pc
Right post (C)		1 pc
Stretcher (D)		1 pc

Hardware List:

1	Allen bolt	5/16"x3-1/4"		6 pcs
2	Allen bolt	5/16"x2"		2 pcs
3	Spring washer	5/16"		8 pcs
4	Flat washer	5/16"x19mm		8 pcs
5	Allen key	4mm		1 pc
6	Wood dowel	ø8x30mm		8 pcs

Assembly Procedure:

(Please follow the sketches below.)

Step 1: Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware. Make sure the quantity of each is correct.

Step 2: Assemble the Left post (B) and Right post (C) to the Upholstered Headboard (A) and Stretcher (D) using Allen bolts (1,2), spring washer (3), flat washer (4), wood dowel (6). Tighten all bolts securely with Allen key (5), but do not over tighten the bolts.

Assembly is now complete.

INSTRUCTION SHEET

U462210H Boulder Upholstered Bed Headboard Queen
U462A210H River Rock Upholstered Bed Headboard Queen
U462220H Boulder Upholstered Bed Headboard King
U462A220H River Rock Upholstered Bed Headboard King

ASSEMBLY INSTRUCTIONS**STEP 2**