

INSTRUCTION SHEET

ASSEMBLY INSTRUCTIONS

U462351 Boulder Metal Base Nightstand
U462A351 River Rock Metal Base Nightstand

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipping.

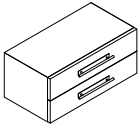



Caution: (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on a damp cloth. The cloth should not be excessively wet. Polish finish with a soft cloth and an industry recognized furniture polish.

(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.





(3) Unpack and dispose of all packing material but be careful not to throw away any assembly parts or hardware. Read the instruction sheet and parts list carefully. Remove all staples and screws used for packaging carefully using pliers and (or) screwdrivers to prevent injury and scratching or damaging flooring.

(4) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the above mentioned components is attached to the furniture properly and kept tightened at all times.

Parts List:

Description	Sketch	QTY
Nightstand (A)		1 pc
Metal Front Frame (B)		1 pc
Metal Back Frame (C)		1 pc
Metal Stretcher (D)		2 pcs

Hardware List:

1	Allen bolt	M5x3/8"		16 pcs
2	Allen bolt	1/4"x5/8"		8 pcs
3	Allen key	4mm		1 pc
4	Anti-Tip Kit			1 set

Assembly Procedure: (Please follow the sketches below.)

Step 1: Unpack, inspect, and read assembly instruction carefully. Lay out the parts and hardware. Make sure the quantity of each is correct.

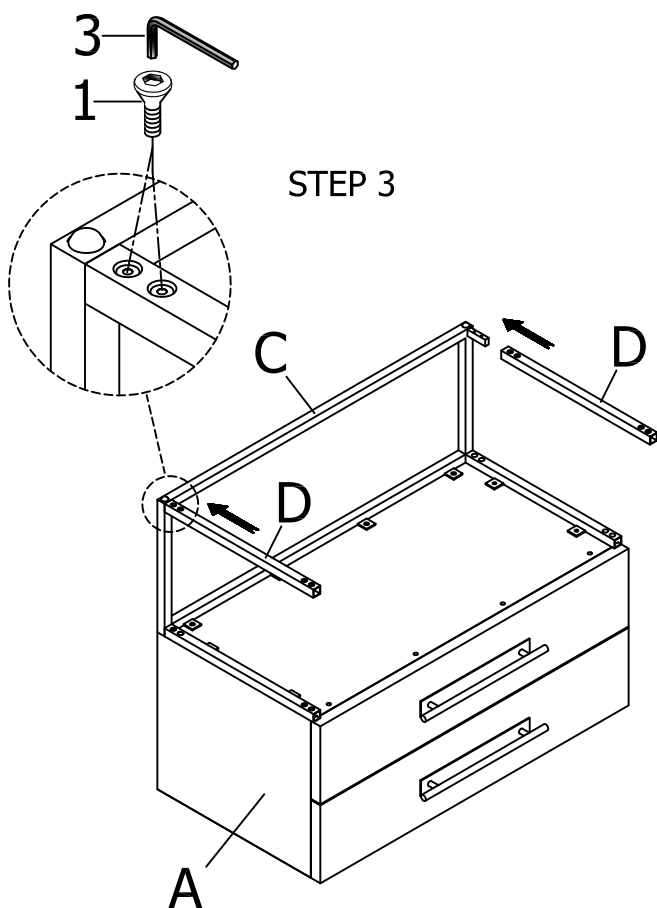
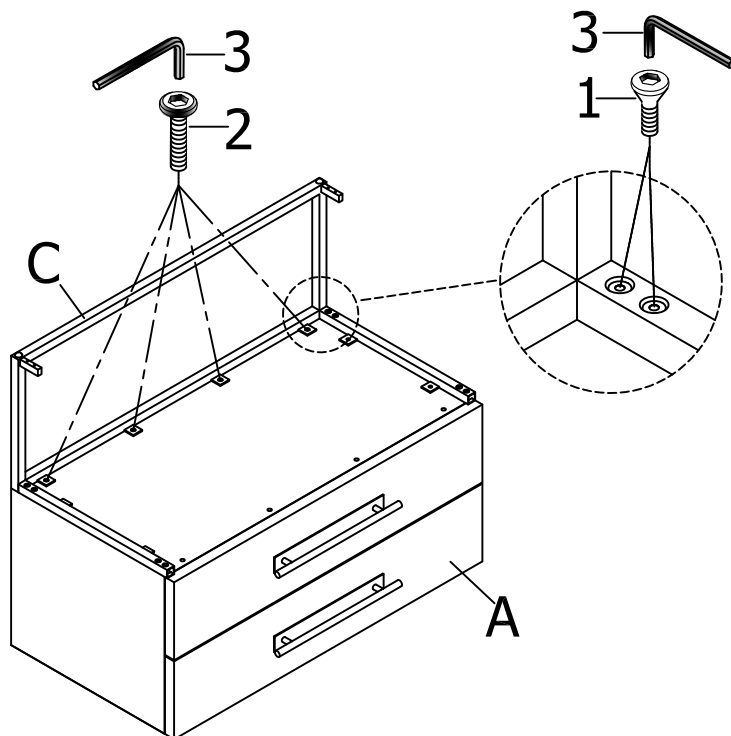
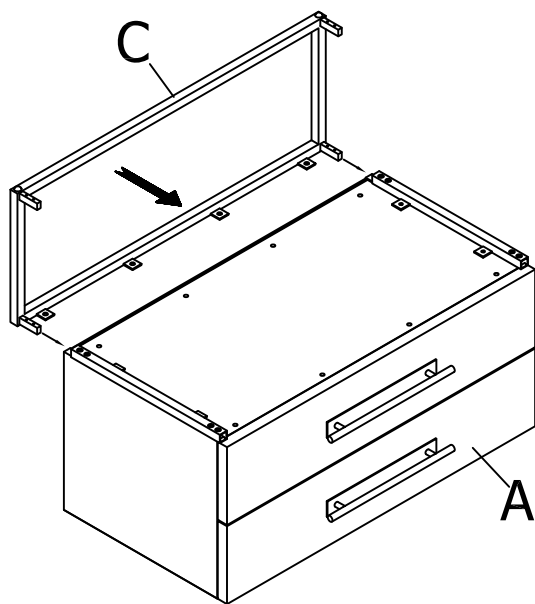
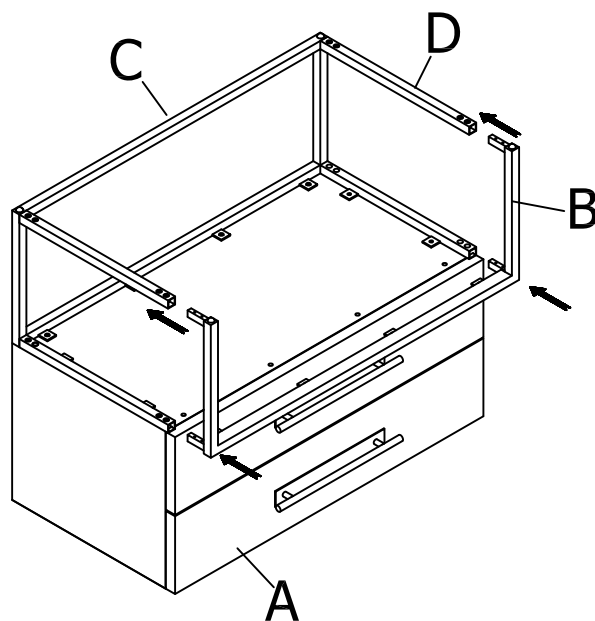
Step 2: Assemble Metal Back Frame (C) to the bottom of Nightstand (A) using Allen bolts (1,2). Tighten all bolts securely with Allen key (3), but do not over tighten.

Step 3: Assemble Metal Stretchers (D) to the Metal Back Frame (C) using Allen bolts (1). Tighten all bolts securely with Allen key (3), but do not over tighten.

Step 4: Assemble Metal Front Frame (B) to the Metal Stretchers (D) and bottom of Nightstand (A) using Allen bolts (1,2). Tighten all bolts securely with Allen key (3), but do not over tighten.

Step 5: Install Anti-Tip Kit (4) as directed by the instructions in the tip restraint bag. Use adjustable leveler as necessary.

Assembly is now complete.

INSTRUCTION SHEET**ASSEMBLY INSTRUCTIONS**U462351
U462A351Boulder Metal Base Nightstand
River Rock Metal Base Nightstand**STEP 2****STEP 3****STEP 4**

INSTRUCTION SHEET**ASSEMBLY INSTRUCTIONS**U462351 Boulder Metal Base Nightstand
U462A351 River Rock Metal Base Nightstand**STEP 4**